

ahloTM 2^{MC}

User Manual

About this Guide

Thank you for choosing ahlo. To ensure optimal usage of your new phone, please read this manual and keep it for future reference.

There may be differences between the user guide description and the phone's actual functionalities due to differences in software versions or specific carrier services.

Help

For inquiries related to this ahlo mobile phone, please visit: www.ahlo.ca

Warranty

Ahlo mobile phones are covered by a limited warranty for a period of 2 years from the date of purchase, or longer if required by law.

For comprehensive warranty details, www.ahlo.ca/warranty

Find the IMEI on Your Phone

You can find your International Mobile Equipment Identity (IMEI) on the packaging materials. Alternatively, on your phone go to Settings > System > About phone > Status > IMEI information.

Legal Information

Go to Settings > About Phone > Legal Information to view the details.


Table of Contents


1	Basics.....	3
1.1	Device overview	3
1.2	Getting started.....	7
1.3	Home screen	9
1.4	Text input	19
2	Multimedia applications	22
2.1	Camera	22
2.2	Google Photos	27
3	Apps and features.....	29
3.1	Phone.....	29
3.2	Contacts	35
3.3	Messages	39
3.4	Calendar	42
3.5	Clock	43
3.6	Calculator	47
3.7	Other applications	48
3.8	Google applications	48
4	Settings	51
4.1	My device.....	51
4.2	Wi-Fi	51
4.3	Bluetooth	52
4.4	Network & Internet	53
4.5	Connections	53
4.6	Wallpaper & Style	55
4.7	Home screen & Lock screen.....	56
4.8	Display.....	56

4.9	NXTPAPER Zone	59
4.10	Sounds & Vibration.....	60
4.11	Notifications	62
4.12	Battery	62
4.13	Smart Manager	63
4.14	Storage.....	63
4.15	Apps	63
4.16	Advanced Features.....	63
4.17	Security & Privacy.....	64
4.18	Location.....	68
4.19	Safety & Emergency	68
4.20	Accounts	69
4.21	Digital Wellbeing & Parental Controls.....	69
4.22	Google	70
4.23	Accessibility	70
4.24	System	73
5	FOTA upgrade.....	75
6	Troubleshooting	76
7	Specifications	83
8	Accessories	85

1 Basics

  1.1 Device overview

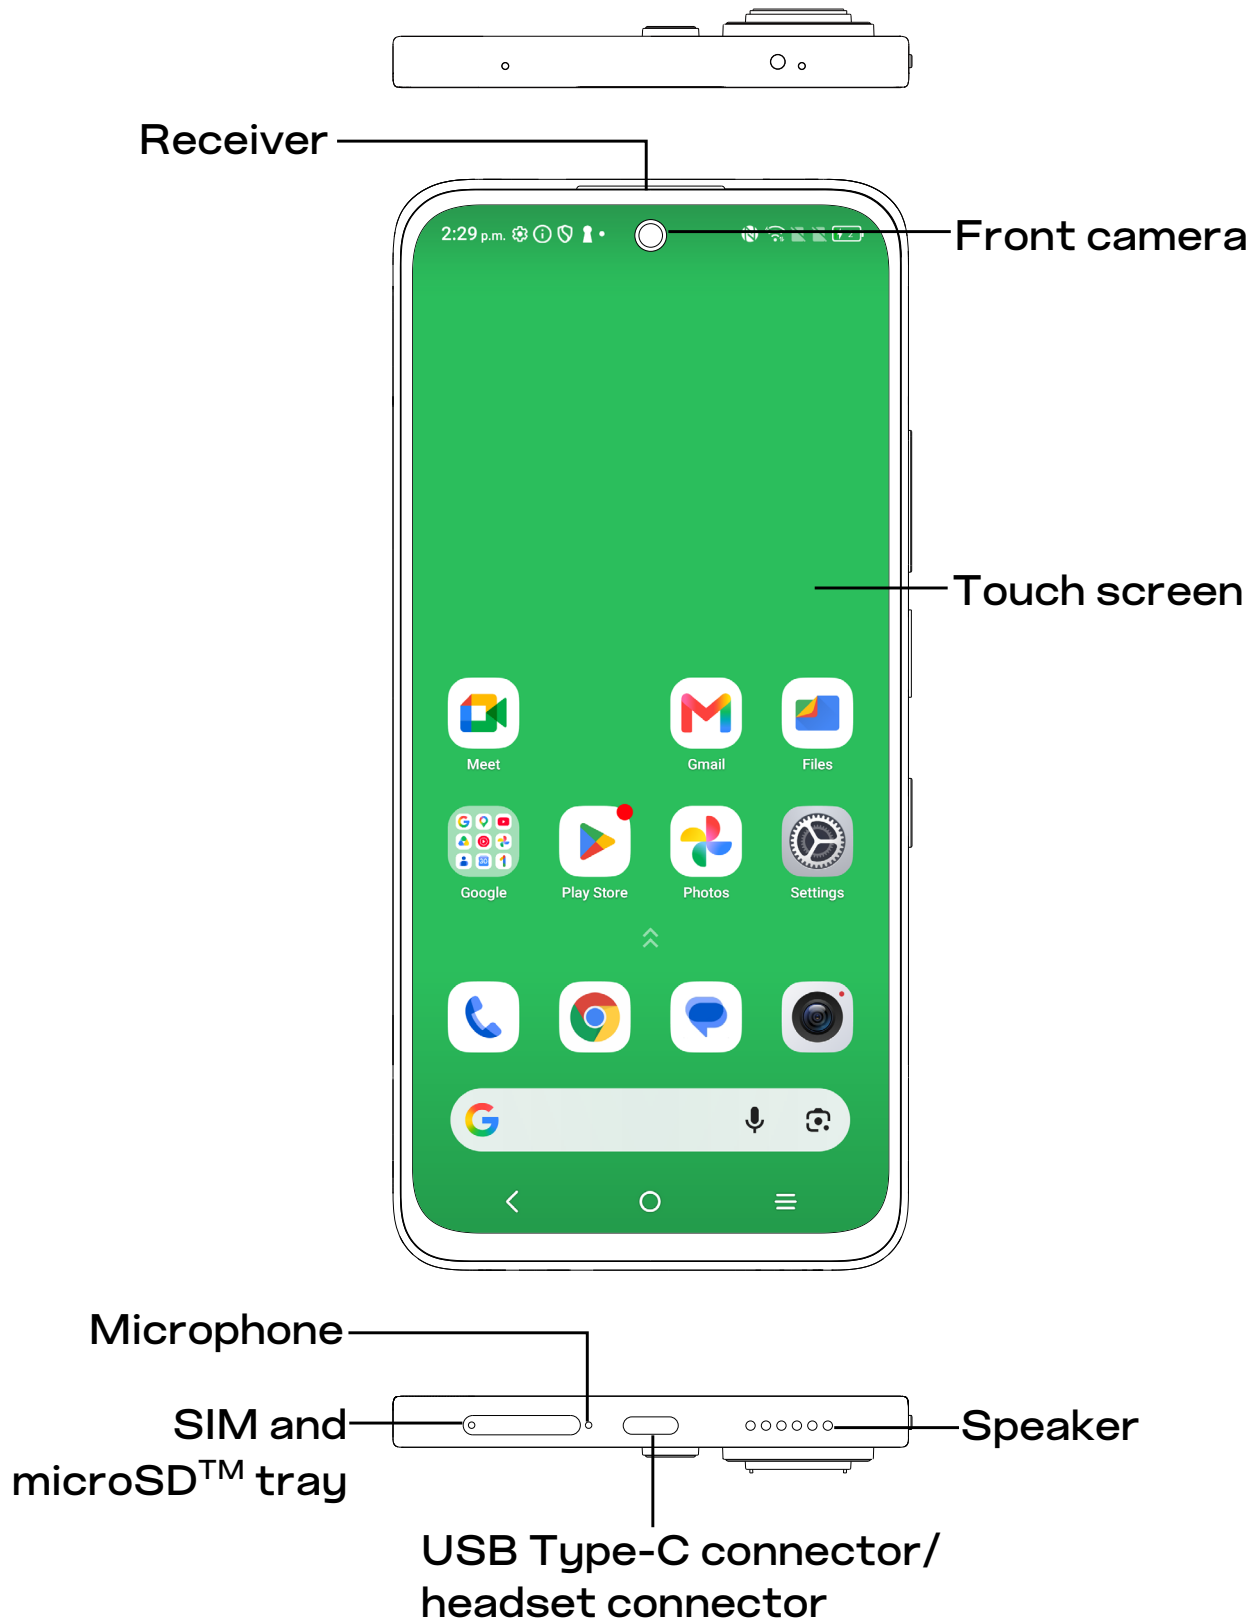

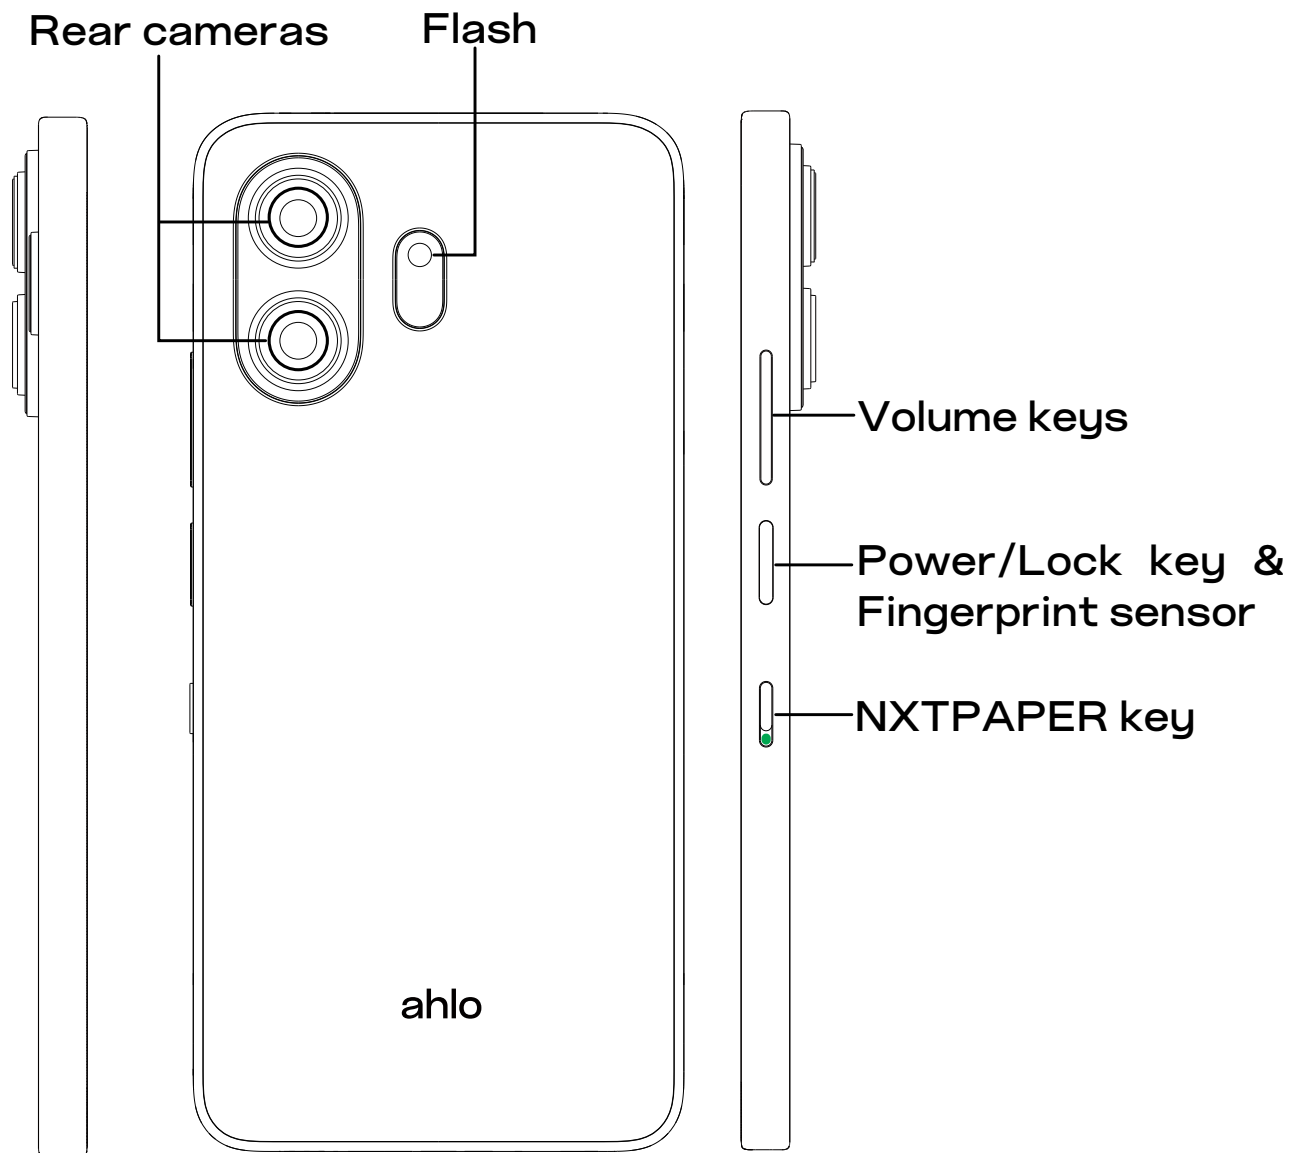

Power/Lock key & Fingerprint sensor

- Press: Lock the screen/Light up the screen.
Note: Additional shortcuts and customizable settings are available at Settings > Advanced Features > Power key.
- Press the Power key and Volume up key at the same time to select from Power off/ Restart/Emergency (SOS).
- Press the Power key and Volume down key at the same time to take a screenshot.
- Press and hold the Power key for at least 8 seconds to force shutdown.
- With Fingerprint unlock activated, press your registered Fingerprint against the Power key to unlock the screen.

Volume keys

- Press the up or down Volume key to adjust ring volume.
- During a voice or video call, adjust the earpiece or headset volume.
- Adjust the media volume while listening to music or a video, or streaming content.
- Mute the ringtone of an incoming call.
- While using the Camera app, press the Volume up or Down key to take a photo or press and hold to take burst shots. To set, tap Camera > Settings > Volume button function.



NXTPAPER key

- Slide this key up to turn on NXTPAPER mode.




- Slide this key down to turn off NXTPAPER mode.

1.2 Getting started

Setting up

- ① Your new phone is partially charged. Charge the battery by using the USB-C cable and charger provided.
- ② Use the provided SIM pin to open the SIM tray.
- ③ Place the Nano SIM card and/or microSD™ card into the tray, then slide the SIM tray into the slot.

Note: microSD™ cards are sold separately. Only use Nano SIM cards with your phone.

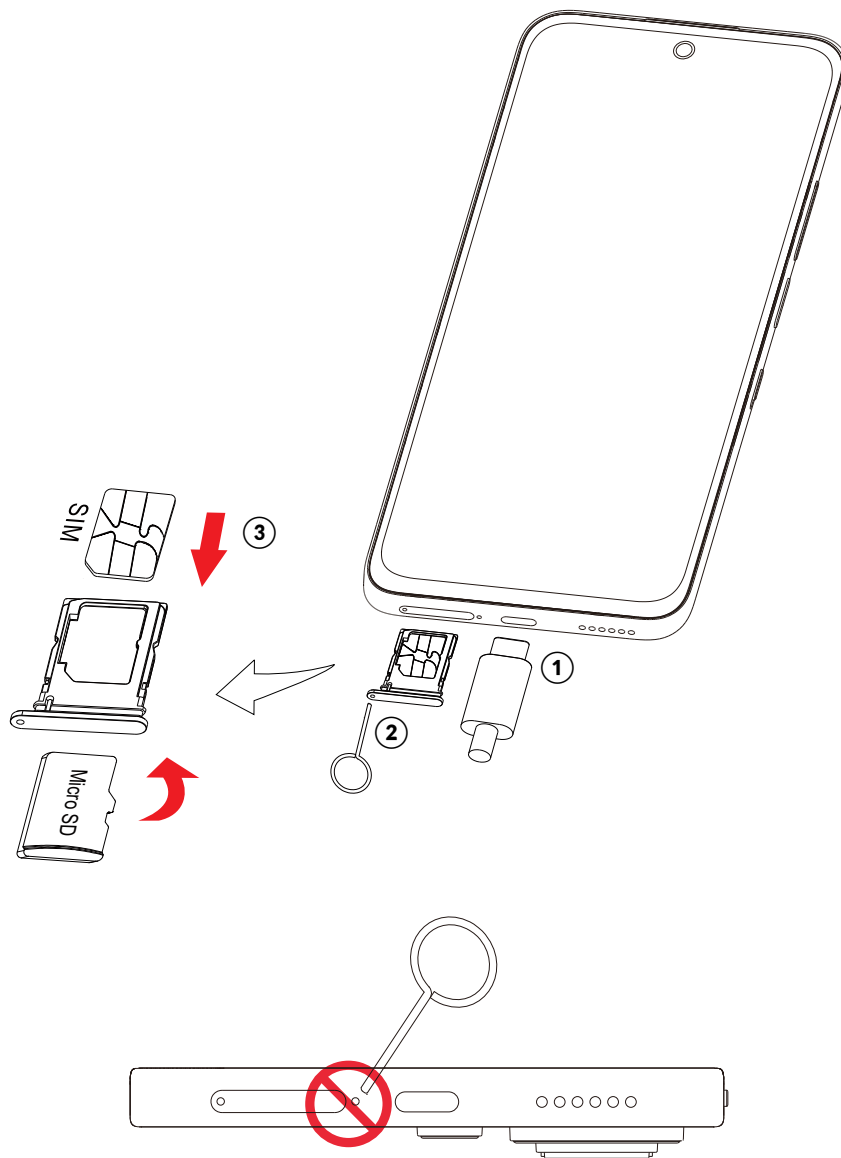

Caution: Do not insert the SIM pin into the small hole on top or bottom of the phone.

Powering on your phone


Hold down the Power key until the phone powers on. Unlock your phone (Swipe, PIN, Password, Pattern, Fingerprint or Face recognition) if necessary and confirm. The Home screen is displayed. Be sure to keep your PIN code secure.

Powering off your phone

Press and hold the Power key and Volume up key until options appear, then select Power off.

1.3 Home screen

You can bring all the items (applications, shortcuts, folders and widgets) you love or use most frequently to your Home screen for quick access. To return to the Home screen, swipe up from the bar at the bottom edge of the screen.

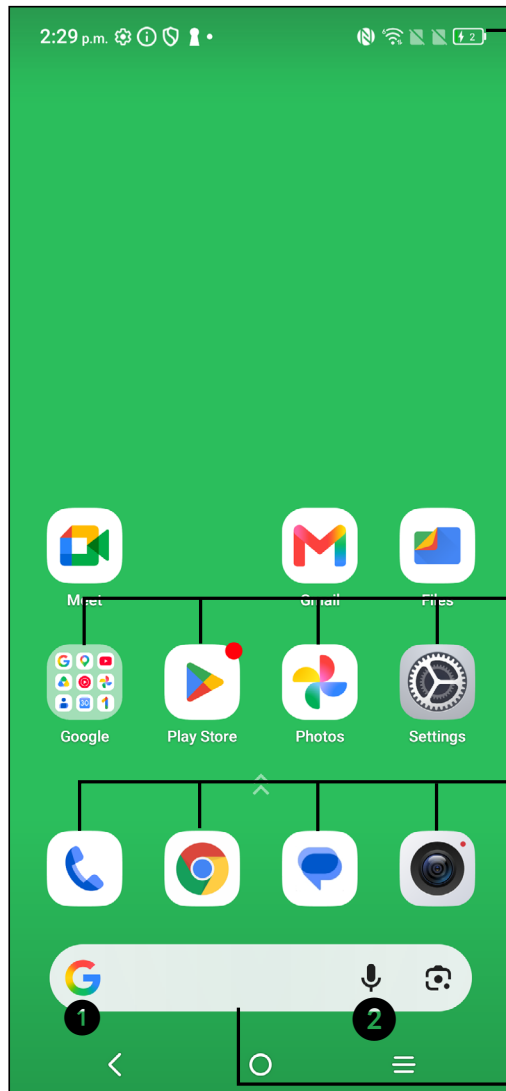

Status bar

- Status/Notification icons
- Drag down from the left side of the status bar to open the notification panel

Tap an icon to open an application or folder.

Favorite applications tray

- Tap to enter the application.
- Press and hold to move or remove applications.

Search bar

- Tap **1** to enter text search screen
- Tap **2** to enter voice search screen

The Home screen is provided in an extended format to allow more space for adding applications, shortcuts, etc. Slide the Home screen horizontally left and right to get a complete view.

Using the Touchscreen

Tap 

To access an application, tap it with your finger.

Touch and hold 


To enter the available options for an item, touch and hold the item. For example, touch and hold a contact in Contacts and an options list will then appear.

Drag 

Place your finger on the screen to drag an object to another location.

Slide/Swipe 


Slide the screen to scroll up and down the applications, images, and web pages. You can slide the screen horizontally too.

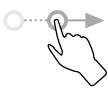Flick 

Similar to swiping, but flicking makes it move quicker.

Pinch/Spread 

Place two fingers on the screen surface and draw them apart or together to scale an element on the screen.

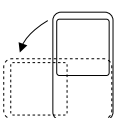Rotate 

Automatically change the screen orientation from portrait to landscape by turning the phone sideways to have a better screen view.

Status bar

From the status bar, you can view both phone status and notification information.

Status icons

	GSM		Vibrate mode
	WCDMA		Alarm is set
	LTE		Connected to a Wi-Fi network
	5G		Speakerphone is on
	Signal strength		No SIM card inserted
	No signal		Battery is charging
	Airplane mode		Battery is low
	Bluetooth connected		Battery is partially drained
	Headset connected		Battery is full
	Location (GPS) is on		


Notification icons

	New email message		Missed call
	New text or multimedia message		Connect to open Wi-Fi network
	Upcoming event		Uploading data
	Downloading data		System update available

Drag down the Status bar to open the Quick Settings panel or Notification panel. Drag up to close the panels.

Notification panel


When there are notifications, swipe down from the left side of the status bar to view the Notification panel to read the detailed information. Tap on the notification directly to open the notification within the respective app.

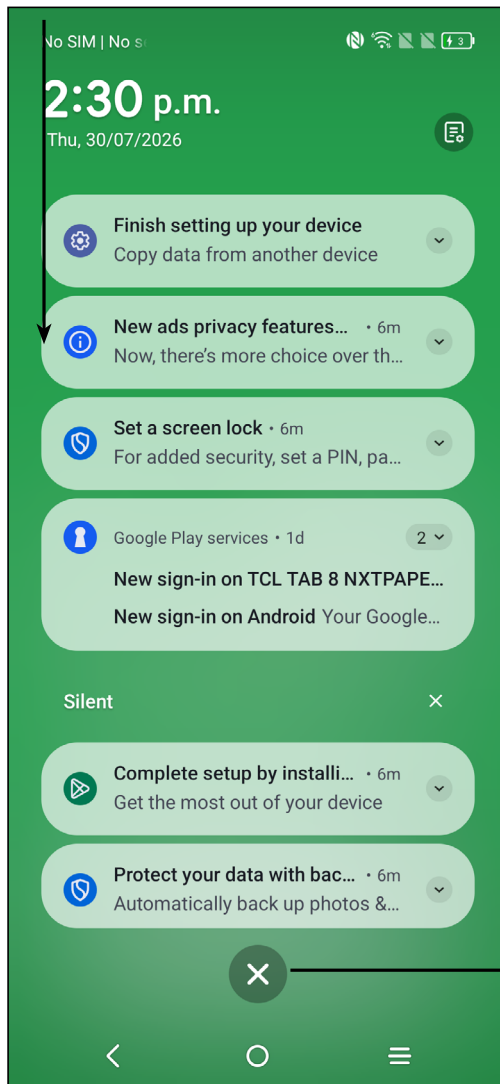

Tap to clear all event-based notifications (other ongoing notifications will remain).

Quick settings panel

Swipe down from the right side of the status bar to view Quick Access settings options, where you can enable or disable functions or change modes by tapping the icons.

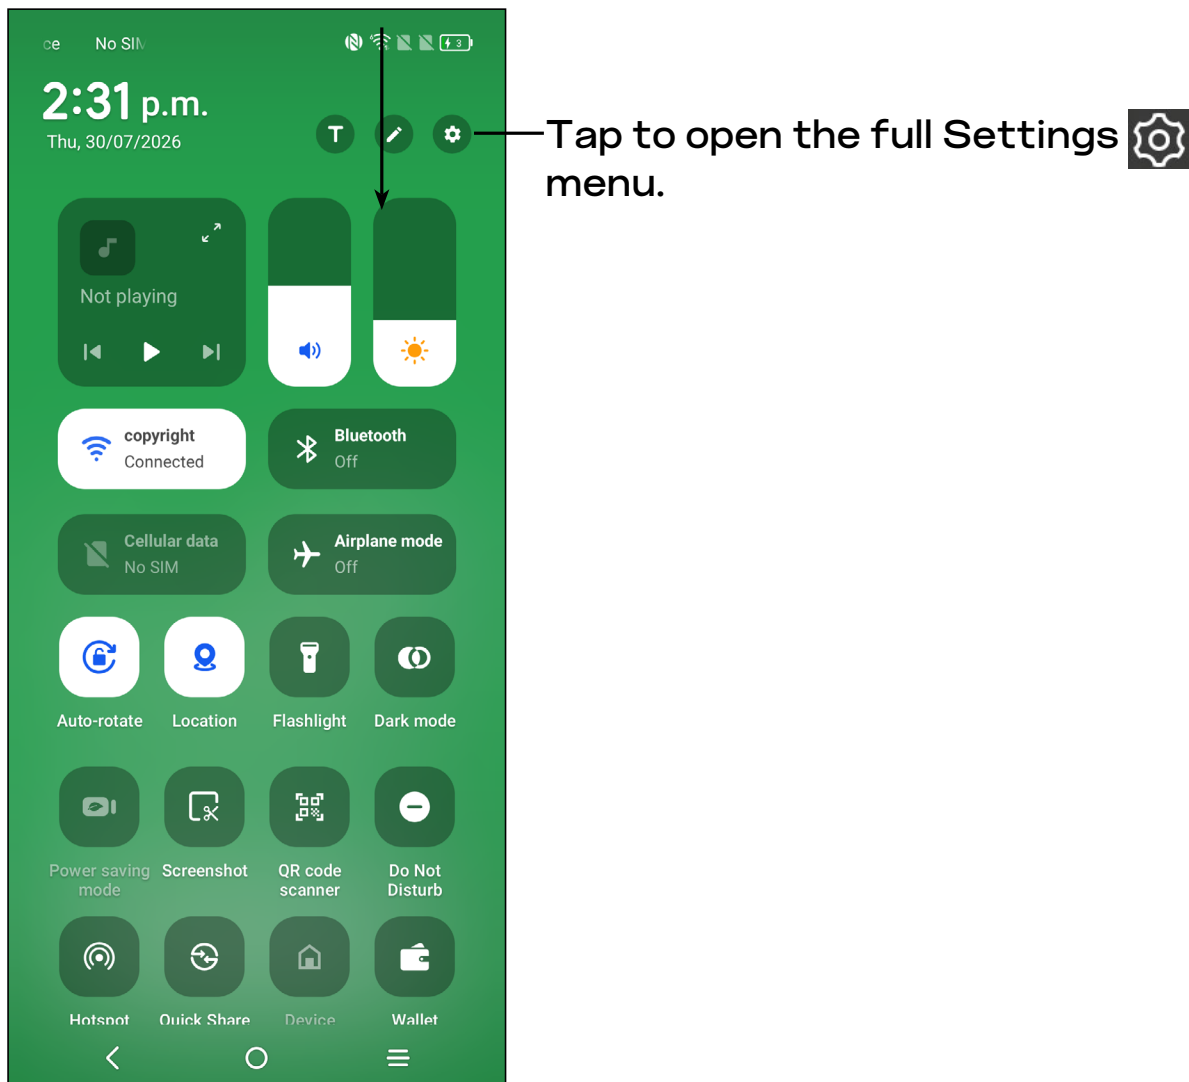

Lock/Unlock your screen

To protect your phone and privacy, you can lock the screen with a pattern, PIN, password, fingerprint or registered face ⁽¹⁾.

To create a screen unlock, tap Settings > Security & privacy > Device unlock > Screen lock.

⁽¹⁾ Face unlock and Fingerprint may not be as secure as Pattern, PIN, or Password locks. The data collected from you through Face unlock and Fingerprint will be stored in your device and will not be disclosed to any third-party. You may delete your data anytime.


To lock the phone screen

If your phone remains inactive for a period of time, it will automatically lock the screen and enter sleep mode to save power. Go to **Settings > Display > Sleep** and select a screen timeout period.

You can also manually lock the screen by pressing the Power key once.

Swipe to unlock the screen

Press the Power key once to light up the screen. Swipe up on the screen to unlock.

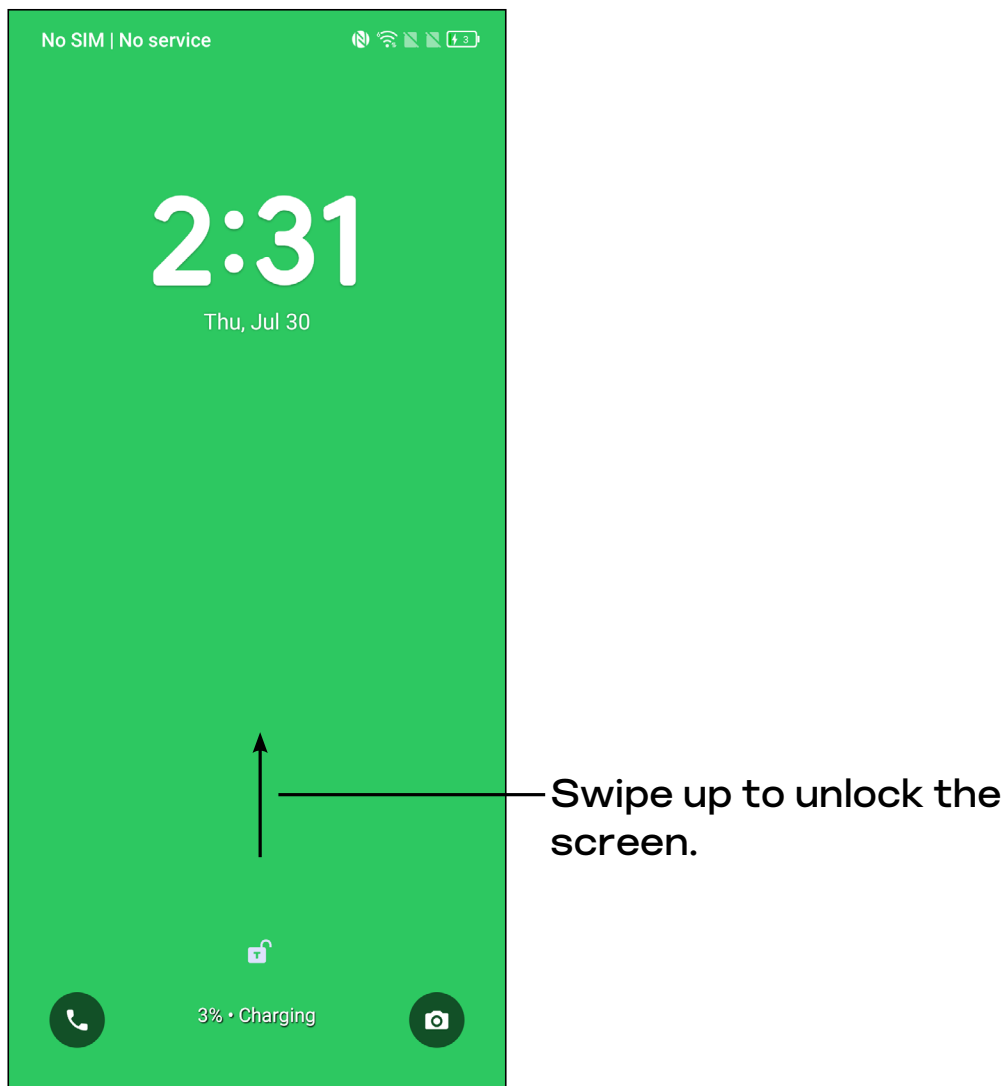

Enter a password to unlock the screen

Once the screen is turned on, swipe up on the screen to display the password input panel. Then enter your lock screen password.

Use pattern unlock

Draw the same pattern you have set to unlock the screen.

Use Face unlock

- Before using Face unlock, you need to set a pattern/PIN/password.
- Hold your phone 8-20 inches from your face. Position your face in the square shown on the screen. For best results, we suggest that the face key is verified indoors and away from direct sunlight.
- Enable Face unlock when your screen turns on, otherwise you will have to swipe up on the screen.

Use Fingerprint unlock

- As with Face unlock, set a pattern/PIN/password before using Fingerprint unlock.
- Touch the sensor with the finger that is easiest to use when unlocking the device. Put your finger on the sensor - when you feel a vibration the fingerprint is fully registered.
- When enabled, Fingerprint unlock can also be used with select apps.

Personalizing your Home screen

Add

You can touch and hold a folder, an application, or a widget and drag the item to your preferred page of the Home screen.

Reposition

Touch and hold an item and drag it to the desired position and then release. You can move items both on the Home screen and the Favorite tray. Hold the icon on the left or right edge of the screen to drag the item to another screen page.

Remove

Touch and hold the item to be removed to activate the Move mode. Tap the Remove icon to remove the app from the Home screen.

Create folders

To improve the organization of shortcuts or applications on the Home screen and the Favorite tray, you can add them to a folder by stacking one item on top of another. To rename a folder, open it and tap the folder's title bar to input the new name.

Wallpaper customization

Touch and hold the Home screen, then tap Wallpaper & style  to customize the wallpaper.

Widgets customization

Touch and hold the idle area of Home screen to enter an options list, and tap Widgets  to enter the shortcuts list. Slide up and down to view all shortcuts.


Recently Used Applications

Swipe up from any screen for 1 second.


Tap a thumbnail in the window to open the application.

Tap one thumbnail and slide it up to close the application, slide it right/left to switch between the applications.

Tap Clear all at the bottom of the screen to close all the running applications.

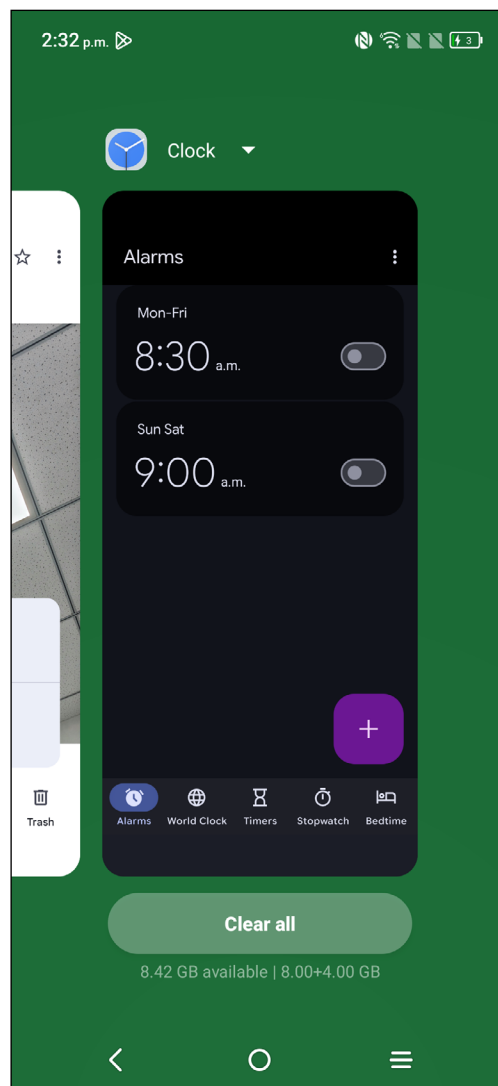

Volume Adjustment

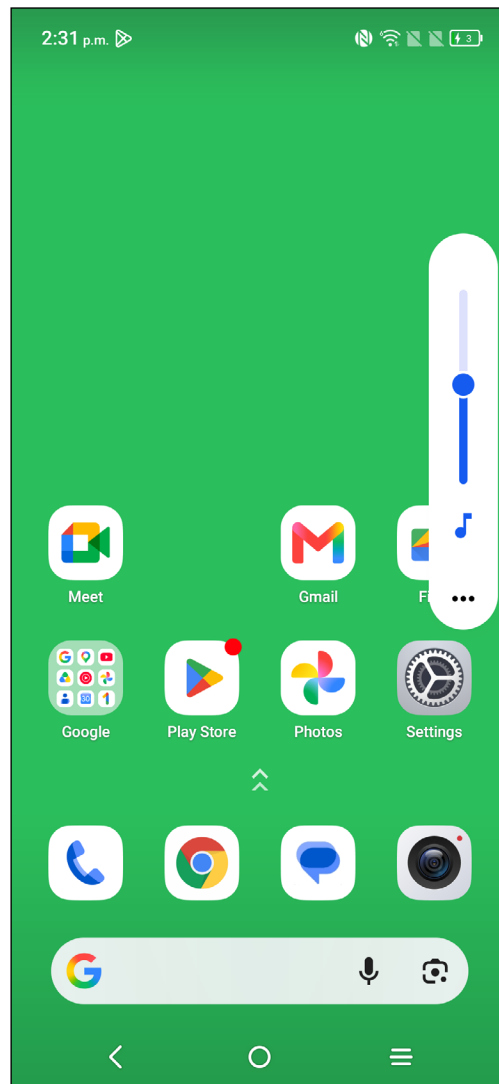

Press the Volume keys to adjust volume.

Tap  to adjust Media, Ring, Notification, and Alarm volume.

1.4 Text input

Using the Onscreen Keyboard


Onscreen Keyboard settings

Swipe up on the Home screen, and then select Settings > System > Keyboard. A series of settings will become available for your selection.

Adjust the Onscreen Keyboard orientation

Turn the phone sideways or upright to adjust the onscreen keyboard orientation. You can adjust it by changing the settings (Tap on/off Settings > Display > Auto-rotate screen).

Gboard

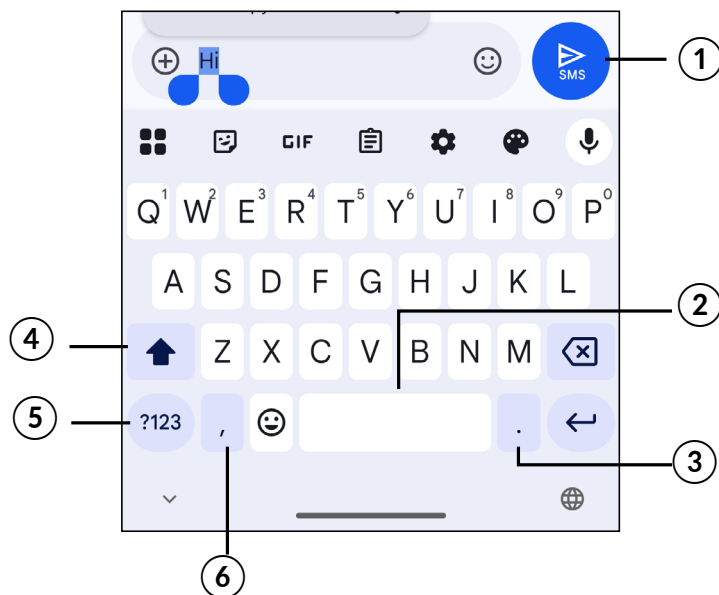


- ① Tap to send the text message.
Touch and hold to record audio.
- ② Touch and hold to switch language (if additional language keyboards are activated).
- ③ Tap to insert a period.
Touch and hold to select symbols.

- ④ Tap to switch between "abc/Abc" mode.
Touch and hold to switch to "ABC" mode.
- ⑤ Tap to access the symbols and numbers keyboards.
- ⑥ Tap to input a comma. Touch and hold to access keyboard settings or enter left or right hand input mode.


Text Editing

- Touch and hold or double tap within the text you want to edit.
- Drag the tabs to change the amount of text to edit.
- The following options will appear: Cut, Copy and Share.

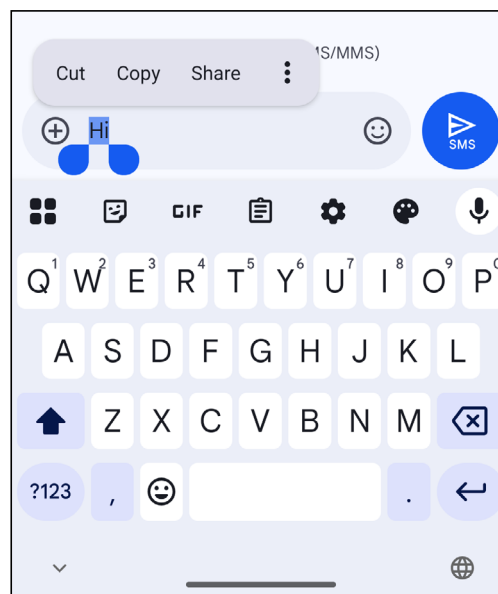

Insert New Text

- Tap where you want to type or touch and hold a blank area. The cursor will blink, and the tab will appear. Drag the tab to move the cursor.
- If you have cut or copied any text, tap the tab to show the Paste and Select all option which allows you to complete pasting immediately.

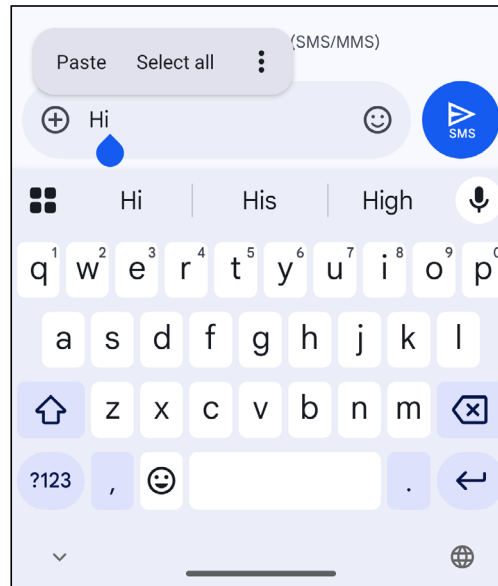


2 Multimedia applications

2.1 Camera



Launch Camera

From the Home screen, tap Camera .

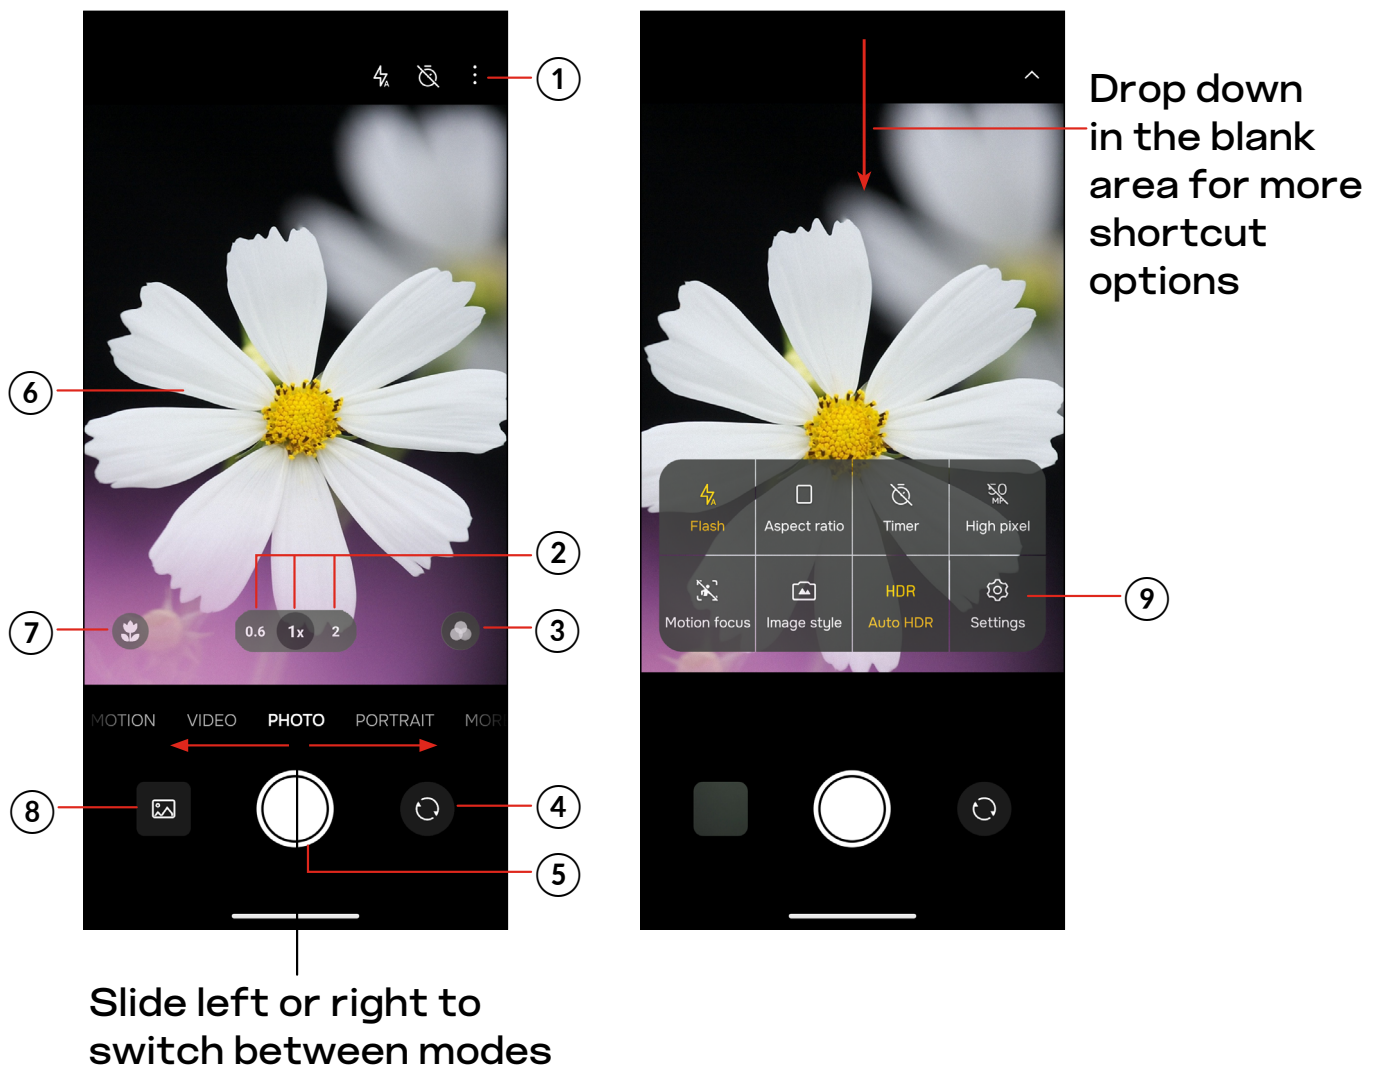

- ① Tap to access settings, like flash and timer.
- ② Automatically zoom to 0.6x, 1x or 2x.
- ③ Apply real-time filter on your photo or video while shooting.
- ④ Switch between front and rear camera.

- ⑤ Take a photo.
- ⑥ Apply real-time lighting and contrast effects on your photo or video while shooting.
- ⑦ Apply super macro
- ⑧ View recently captured photos or videos.
- ⑨ Tap to set more options

More options are available when you switch to using the front camera:

- ⑩ Face Beauty: Tap  to adjust skin smoothing and enhance colouring effects in portraits.

To Take a Photo

The screen acts as the viewfinder. First, position the object or landscape in the viewfinder, tap the screen to focus if necessary. Tap  to capture. The photo will be automatically saved. You can also touch and hold  to take burst shots, which will also be automatically saved.

To Take a Video

Tap VIDEO to change the camera mode to video. Tap  to start video recording. While the recording is in progress, you can tap  to save the frame as a separate photo.

Tap  to pause video recording and tap  to continue. Tap  to stop recording. When the recording stops, the video will be automatically saved.

Modes and Settings

Modes

Slide left or right to switch between modes.

- VIDEO: Access video mode.
- PHOTO: Auto is the default mode for Camera.
- PORTRAIT: Create a depth of field effect. You can compose an image that highlights your subject while producing a gorgeously blurred background.
- MOTION: Capture wonderful moments effortlessly.
- NIGHT: Night mode enhances the camera's sensitivity to light, allowing you to capture details that would otherwise be lost in the dark.

Tap MORE to access more modes. These modes can be moved to the main screen by tapping .

- PANO: Use pano to capture a panoramic photo, an image with a horizontally elongated field of view. Tap the shutter button and move the phone steadily along in the direction indicated on the screen. The photo will be saved when all the slots are filled, or when pressing the shutter button again.
- LIGHT TRACE: Capture creative movements of light using a long exposure photograph.
- Horizon Lock: Horizon lock helps you steadily capture every moment
- Path: Take multiple photos continuously and automatically generate motion trajectory. Keep the photos stable and well lit. Path only supports landscape screen shooting.
- PRO: Pro camera mode lets you fine-tune parameters and gives you full control over ISO, WB exposure time, aperture, shutter speed and so on.

- SLO-MO: Record special occasions and fast moving scenes even in a dark environment, then play them back at a slow frame rate.
- MOVIE Mode: Capture a 21:9 frame video with film texture filter and easily share on social media.
- TIME LAPSE: While time-lapses are viewed as videos, they are actually a sequence of raw images. Shoot for 10 minutes and you will get a video with the preset scenario applied.
- Google Lens⁽¹⁾: Google Lens is a free tool that uses Google to help you: copy and translate text, search for similar products, identify plants and animals, discover books and media, scan barcodes, and more.

Settings:

- AI scene detection: It can detect image content and scenes, and automatically apply a specific preset to images in different scenes. This allows you to apply more aggressive presets to images than can benefit from that - like landscapes and sunsets.
- Intelligent mode recommendation: When AI Scene detection is active, enable this function as well to recommend appropriate modes based on scenarios.
- Photo size: Set the photo MP size.
- Auto HDR: Auto HDR is a shooting mode to widen the light gradation so you can capture detail in both bright and dark places within the frame. When you are using auto HDR mode, your camera will shoot at least one photo at the optimal exposure and at least one on either side on the conditions.
- Image quality enhancement: When the camera recognizes that the light is dim, it'll automatically extend the shooting time to improve the brightness of the photo.

⁽¹⁾ Your phone must also be connected to a network.


- **Prioritise fast shooting:** Enable this mode to prioritize capturing split-second moments, automatically adjusting shutter speed and minimizing processing delay for seamless action shots.
- **Quick snap:** When enabled, double press the volume down key to take a picture while the screen is off.
- **Video quality:** Select video quality.
- **Microphone:** Turn on/off microphone while recording a video.
- **Touch to shoot:** Turn on/off. Take a photo by tapping on the preview area.
- **Mirror camera:** Turn on/off. Save selfies as previewed without flipping them.
- **Gesture to capture:** Turn on/off. With the palm gesture activated, show your palm to the camera and the device will automatically take a photo or video after a few seconds.
- **Gridlines:** Turn on/off. Show gridlines when taking photos.
- **Camera leveler:** Turn on/off. The camera level tool is useful for capturing balanced compositions.
- **Volume button function:** Customize the Volume button to Shutter, Zoom or Volume when using camera.
- **Storage:** Choose between phone and microSD™ card storage when a microSD™ card is inserted. The default is Internal storage.
- **Save location information:** Turn on/off. Tag photos and videos with your location. This option is available when GPS location services and wireless network are enabled, and permission is granted.
- **Shutter sound:** Turn on/off. Shutter sound when taking a photo or video.
- **QR code:** Allow QR code scanning.
- **Reset settings:** Tap to reset the camera to its factory default settings.

2.2 Google Photos



Google Photos acts as a media player for you to view photos and play videos. In addition, a set of further operations to pictures and videos are available for selection.

To view the photos you have taken, tap  from the Home screen.

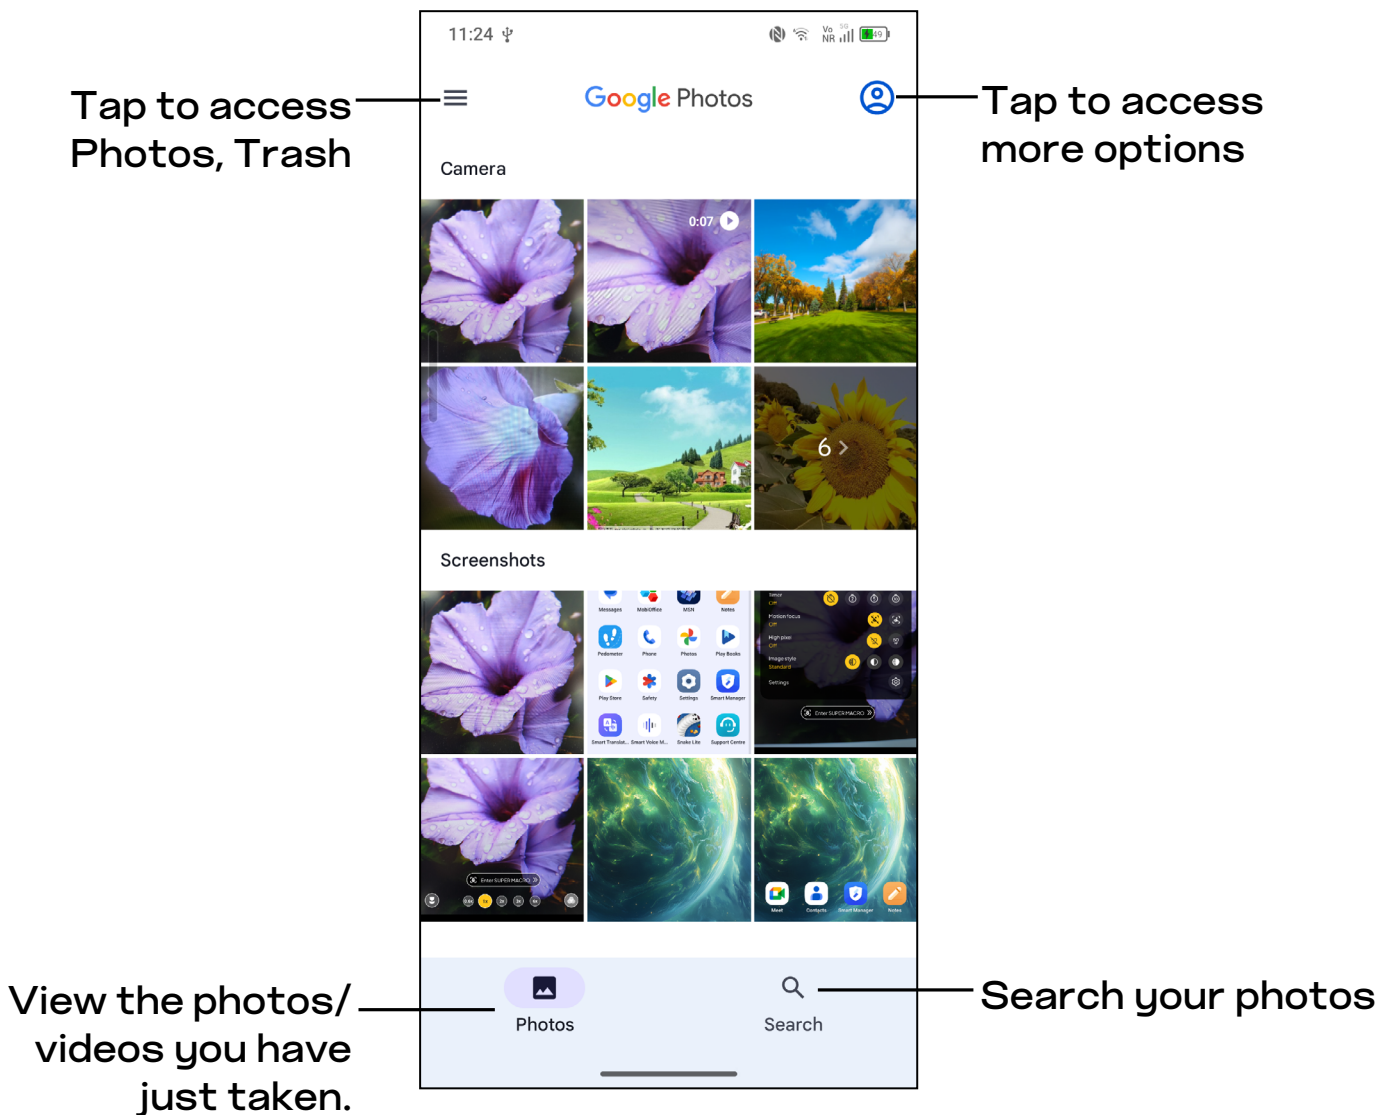

Working with pictures

Find the picture you want to work on, then tap the picture.



- ① Share the picture.
- ② Edit the picture.
- ③ Add the picture to Album or move this picture to Locked folder.
- ④ Delete the picture.


3 Apps and features

3.1 Phone.....




Making a call

To make a call, tap  in the Favourites tray.

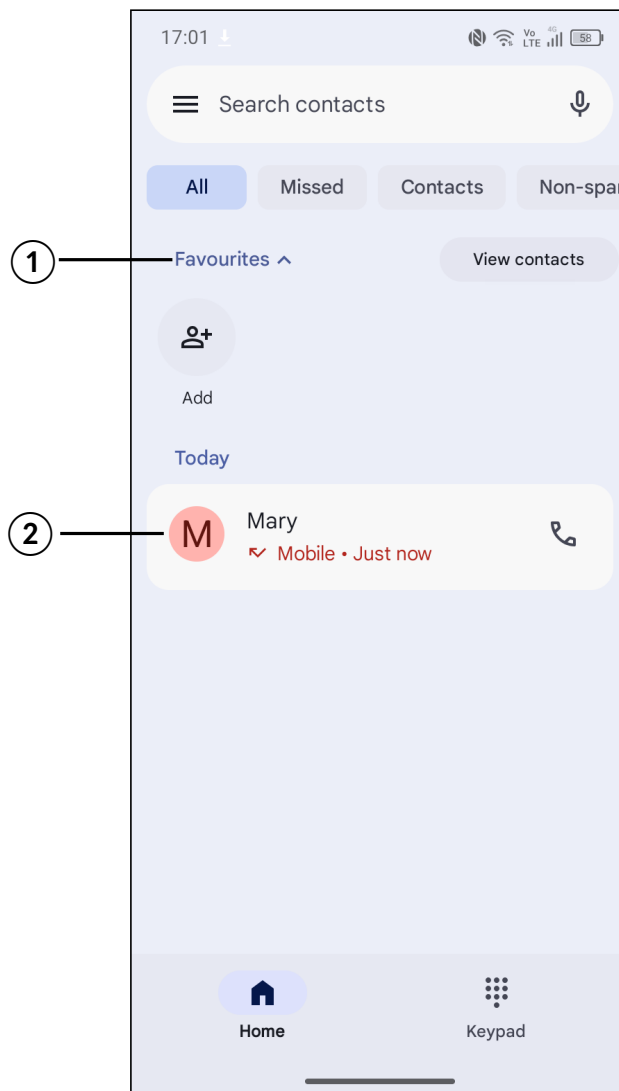

① Favourite numbers

② Call logs

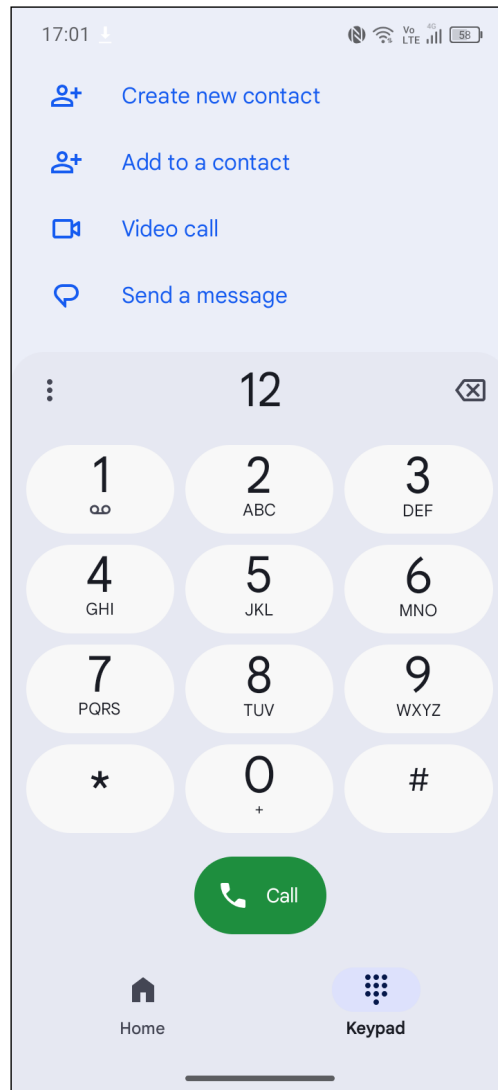

Enter the desired number from the keypad and tap  to place a call or select a contact from Contacts or Call logs by sliding or tapping tabs, then make a call.

The number you entered can be saved to Contacts by tapping Create new contact or Add to a contact.

If you make a mistake, you can delete the incorrect digits by tapping .

To hang up a call, tap .


International call

To dial an international call, touch and hold  to enter "+", then enter the international country prefix followed by the full phone number and tap .

Emergency call

If your phone has network coverage, dial the emergency number and tap  to make an emergency call. Depending on your network and country this could even work without a SIM card and without typing in the SIM PIN code.

Answering or Rejecting a Call

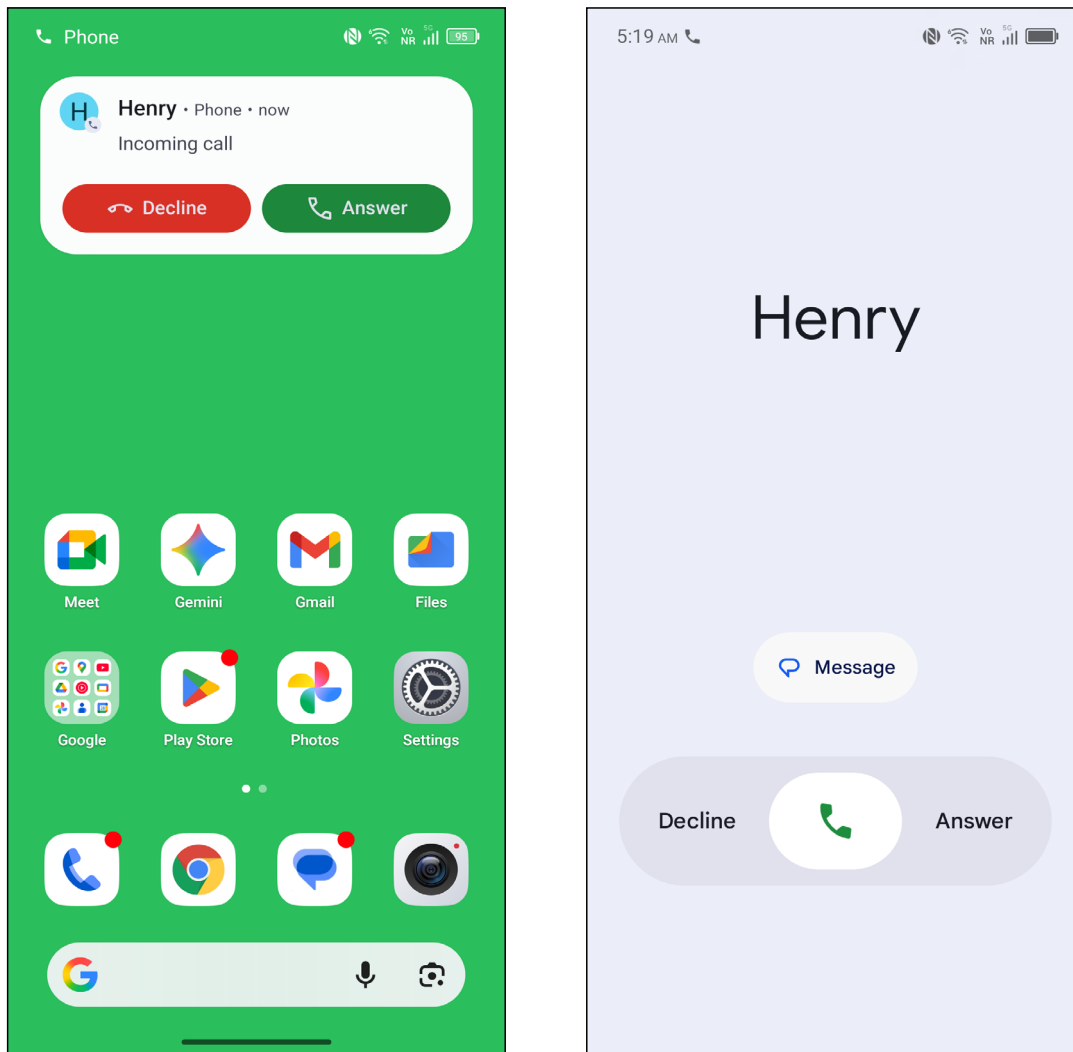

When you receive a call:

- Tap Answer, or swipe right on the icon  to answer.
- Tap Decline, or swipe left on the icon  to reject.
- Tap Message icon  to reject the call by sending a preset message.


Calling your Voicemail

To access your voicemail, touch and hold **1**.

If you receive a voicemail, **00** will appear on the Status bar. Open the Notification panel and tap New voicemail.

During a Call

To adjust the volume during a call, press the Volume up/down key.

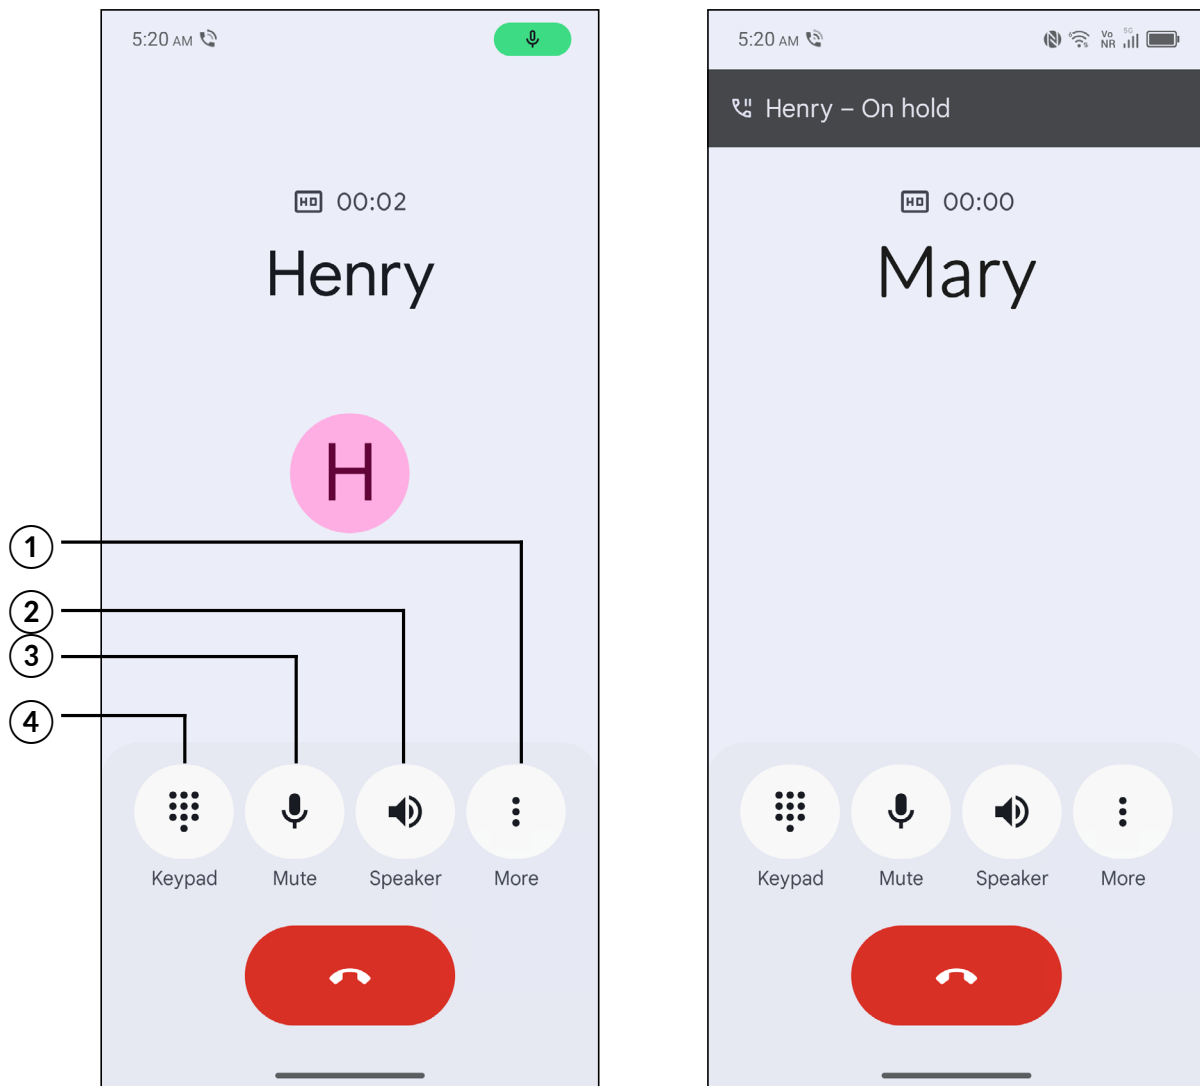

- ① Tap to show more options
- ② Activate the speaker during the current call. Tap again to deactivate the speaker.
- ③ Mute the current call. Tap again to unmute the call.
- ④ Display the keypad.



To avoid accidental operation of the touchscreen during a call, the screen will be locked automatically when you put the phone close to your ear; and it will be unlocked when the phone is taken away from your ear.

Managing Multiple Calls

Swap calls

When you accept two calls, tap the  icon to switch between two lines. The current call will be put on hold, and you are able to join the other call.

Conference calls⁽¹⁾

You can set up a conference call as follows.

1. Place a call to the first participant of the conference call.
2. Tap  to add another call.
3. Enter the phone number of the person you want to add to the conference and tap . You can also add participants from Call logs or Contacts.
4. Tap  to start the conference.
5. Tap  to end the conference call and disconnect all callers.

Call settings

Tap  from the Phone screen, then tap Settings to set phone and contact settings.

⁽¹⁾ Depending on your network carrier.

Call Log

You can access your call logs by tapping  from the Phone screen to view missed calls, outgoing calls, and incoming calls.

Tap on call to view information or further operations. You can launch a new call, send a message to the contact or number, or view detailed information of the call.

To delete the call history of a selected contact or number, touch and hold the call log and choose Delete.

3.2 Contacts.....




Contacts enable quick and easy access to the contact you want to reach.

You can view and create contacts on your phone and synchronize these with your Gmail contacts or other applications on the web or on your phone.

Consult your Contacts

To see your contacts, tap  from the App drawer.

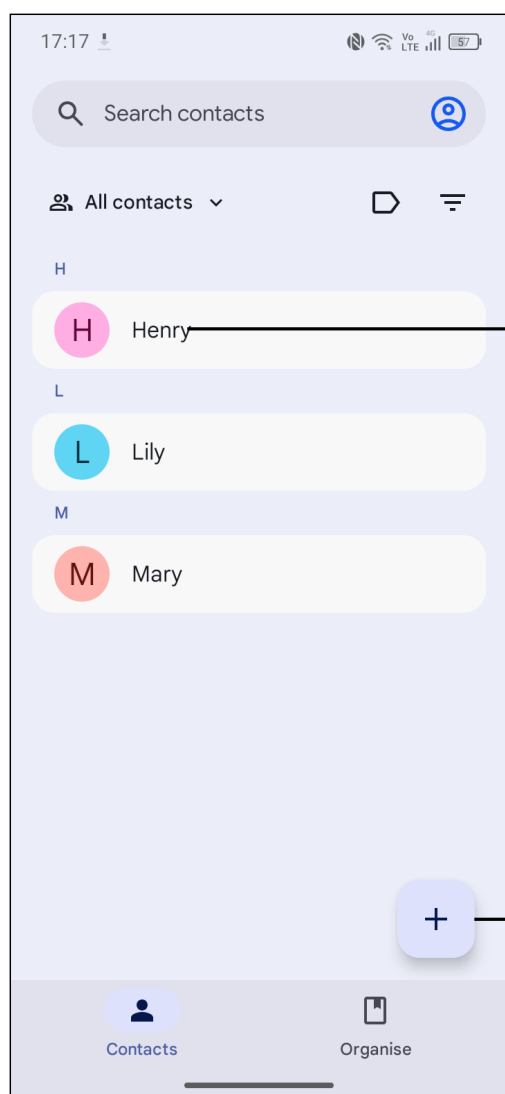

- Tap to open the Quick contact panel.
- Touch and hold to share or delete the selected contact.

+ Add new contact.




Deleted contacts will also be removed from other applications on the phone or web the next time you synchronize your phone.

Adding a contact

Tap  in the contact list to create a new contact.

You are required to enter the contact's name and other contact information. By scrolling up and down the screen, you can move from one field to another.

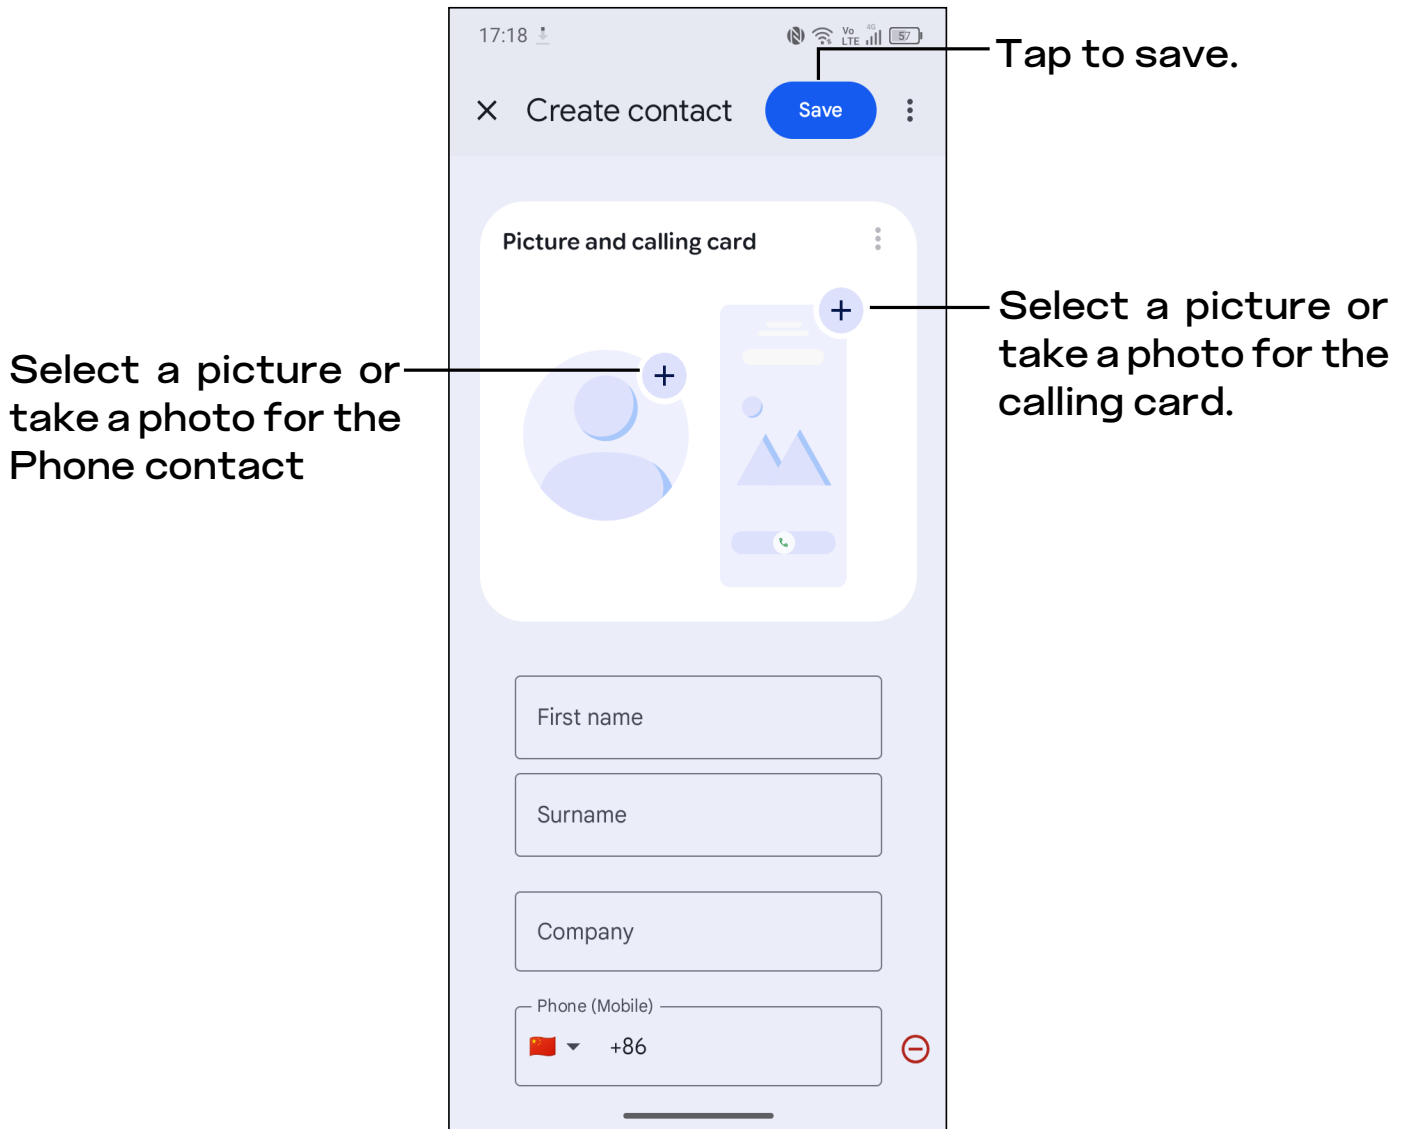

Add to/remove from Favourites ⁽¹⁾

To add a contact to Favourites, you can tap a contact to view details then tap  to add the contact to Favourites.

To remove a contact from Favourites, tap  on the contact details screen.


⁽¹⁾ Phone and Gmail contacts can be added to Favourites.

Editing Your Contacts

To edit contact information, tap  in the contact details screen.
When finished, tap Save.

Using the Quick contact panel

Tap a contact to open the Quick contact panel.

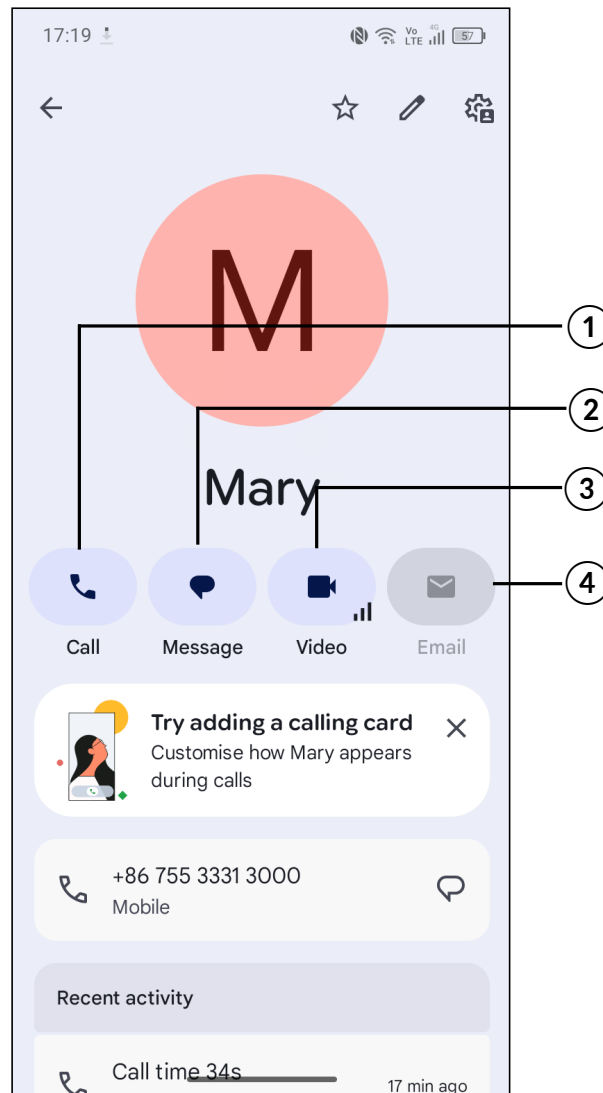

- ① Touch icon  or the number to make a call.
- ② Touch icon  to send a message
- ③ Touch icon  to make a video call.
- ④ Touch icon  to send an email.

The icons available on the Quick contact panel depend on the information you have for the contact and the applications and accounts on your phone.

Sharing Contacts

You can share a single contact or multiple contacts with others by sending the contact's information to them via Bluetooth, Gmail, etc.

- From the Contacts screen, touch and hold a contact and tap  .
- Select the application to perform this action.

Accounts

Contacts, data or other information can be synchronised from multiple accounts, depending on the applications installed on your phone.

To add an account:

- From Contacts, tap  and touch Contacts Settings > Accounts > Add account.
- From the Home screen, tap Settings > Accounts > Add account.

Select the kind of account you are adding, such as Exchange or Google. Then enter the login information for that account, including your username and password.

Auto-sync

When activated, changes to information on the tablet or online will be automatically synchronized with each other. From the Accounts screen, tap Automatically sync data.

3.3 Messages





Writing a New Message

You can create, edit, send and receive SMS and MMS with this phone.

To access Messages, tap  from the Home screen.

On the message list screen, tap Start chat to write text/multimedia messages.

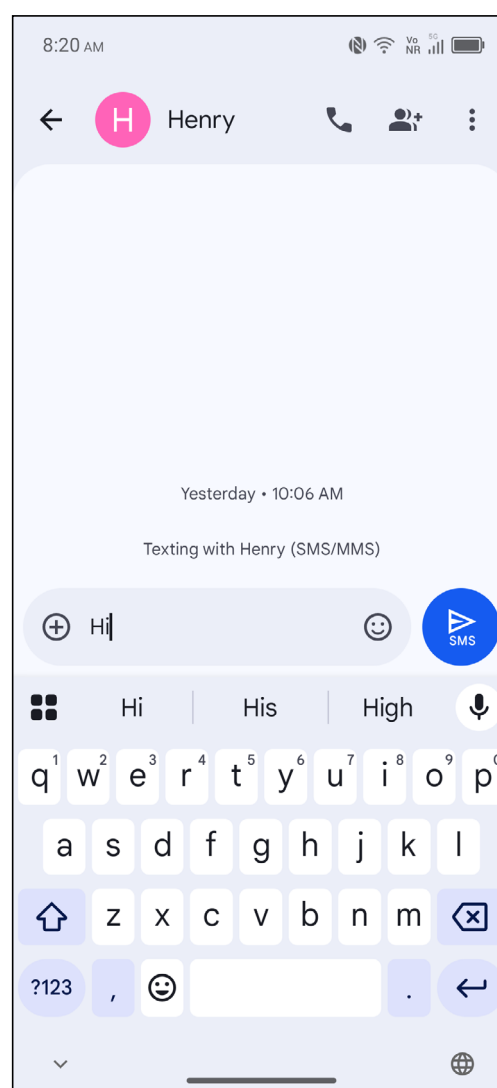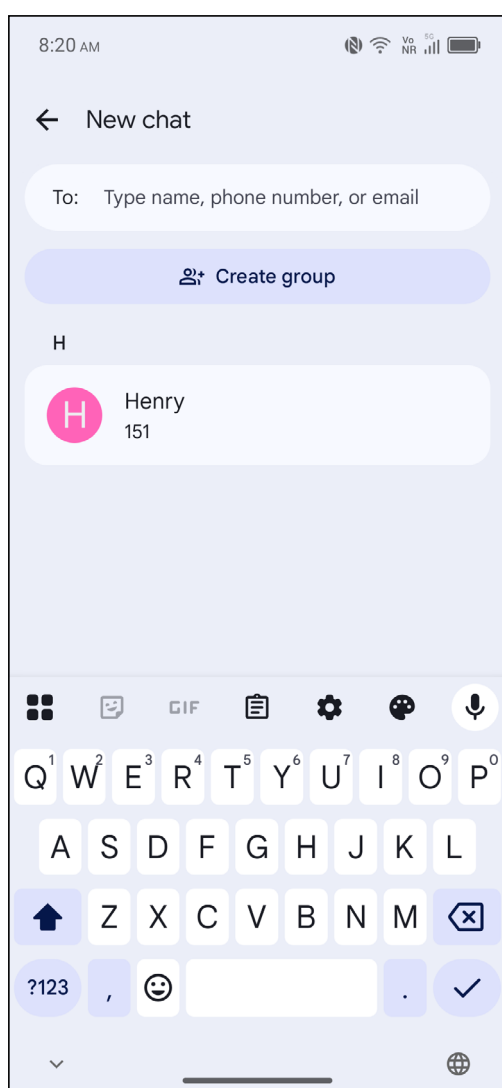

Sending a text message

- To add recipients, enter a mobile phone number or select a contact in the “To” bar.
- Tap the Text message bar to enter the content of the message.
- When finished, tap  to send the content message.



Specific letters (accented) will also increase the size of the SMS. This may cause multiple SMS to be sent to your recipient.

Sending a multimedia message

MMS enables you to send video clips, images, photos, animations, and sounds to other compatible phones and e-mail addresses.

An SMS will be converted to MMS automatically when media files (image, video, audio, etc.) are attached or subject or email addresses are added.


- To send a multimedia message, enter the recipient's phone number or email address in the “To” bar.
- Write the text of the message in the Text message bar.
- Tap  to give access to your location, share a contact or attach files.
- When finished, tap  to send the multimedia message.

Manage Messages

When receiving a message,  will appear on the Status bar as a notification. Drag down the Status bar to open the Notification panel. Tap the new message to open and read it. You can also access the Messages application and tap the message to open it.

Messages are displayed as a conversation.

Tap a message to enter the message composing screen:

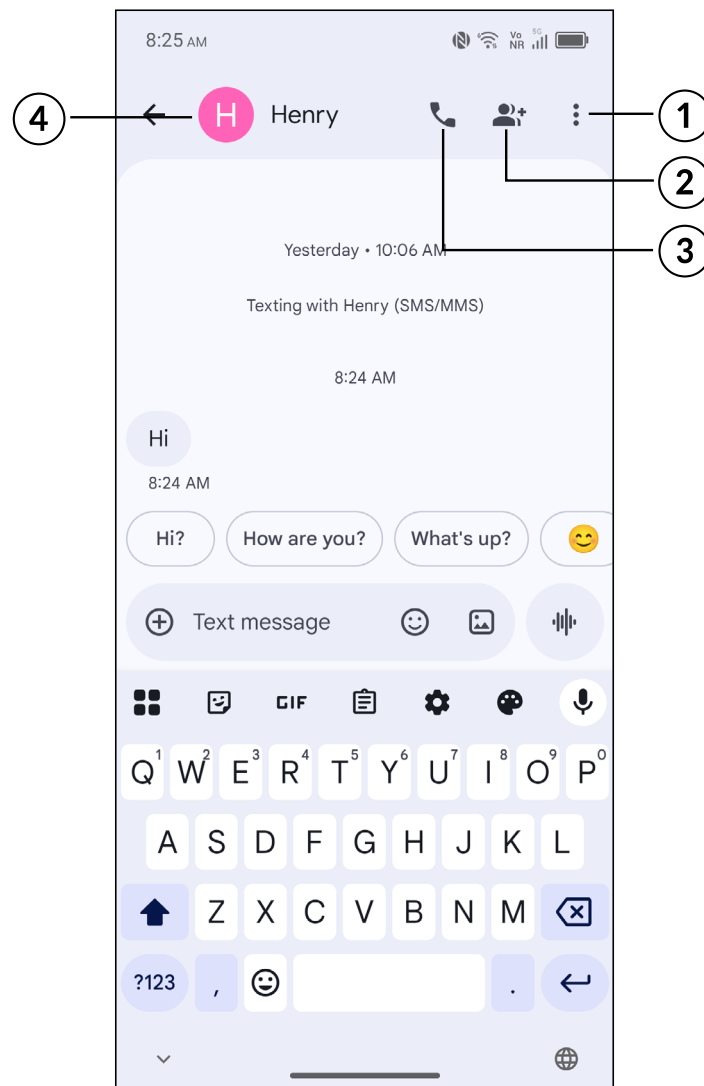

- ① More options
- ② Add people
- ③ Call the number
- ④ View the contact details if the number has been saved

To adjust message settings, tap  and select Messages settings on the message list screen.

3.4 Calendar



Use Calendar to keep track of important meetings, appointments, etc.

To view the calendar and create events, swipe up from the Home screen. Tap Calendar.

Multimode View

You can display the Calendar by Schedule, Day, 3 days, Week, or Month. Tap  to select.

To create New Events

You can add new events from any Calendar views.

- Tap .
- Fill in all required information for this new event. If it is a whole-day event, you can turn on All-day .
- Invite guests to the event. Enter the email addresses of the guests you want to invite and select send by email. The guests will receive an invitation from Calendar and Email.
- When finished, tap Save at the top of the screen.

To quickly create an event from the Day, 3 days and Week view screens, tap an empty spot to create a new event.

To Delete or Edit an Event

To delete or edit an event, tap the event to enter its details screen. Tap  to edit the event, or tap  > Delete to delete.

Event Reminder

If a reminder is set for an event, the upcoming event icon  will appear on the Status bar as a notification when the reminder time arrives.

Drag down the Status bar to open the notification panel, tap an event name to view the Calendar notification list. Tap  or  to expand/collapse calendar notifications.

3.5 Clock



Swipe up from the Home screen, then tap Clock.

Adjust Clock Settings

Tap  to access Clock and Alarm settings.

Alarm

From the Clock screen, tap Alarm to enter.

- Turn on  to enable the alarm.
- Tap  to add a new alarm and tap OK to save.
- Tap a currently existing alarm to enter the alarm editing screen.
- Tap Delete and confirm to delete the selected alarm. You can also choose "Undo" to recall the deletion.


World Clock

To view the date and time, tap World Clock.

- Tap  to search for and add another city to track the time.

Timers

From the Clock screen, tap Timers to enter.

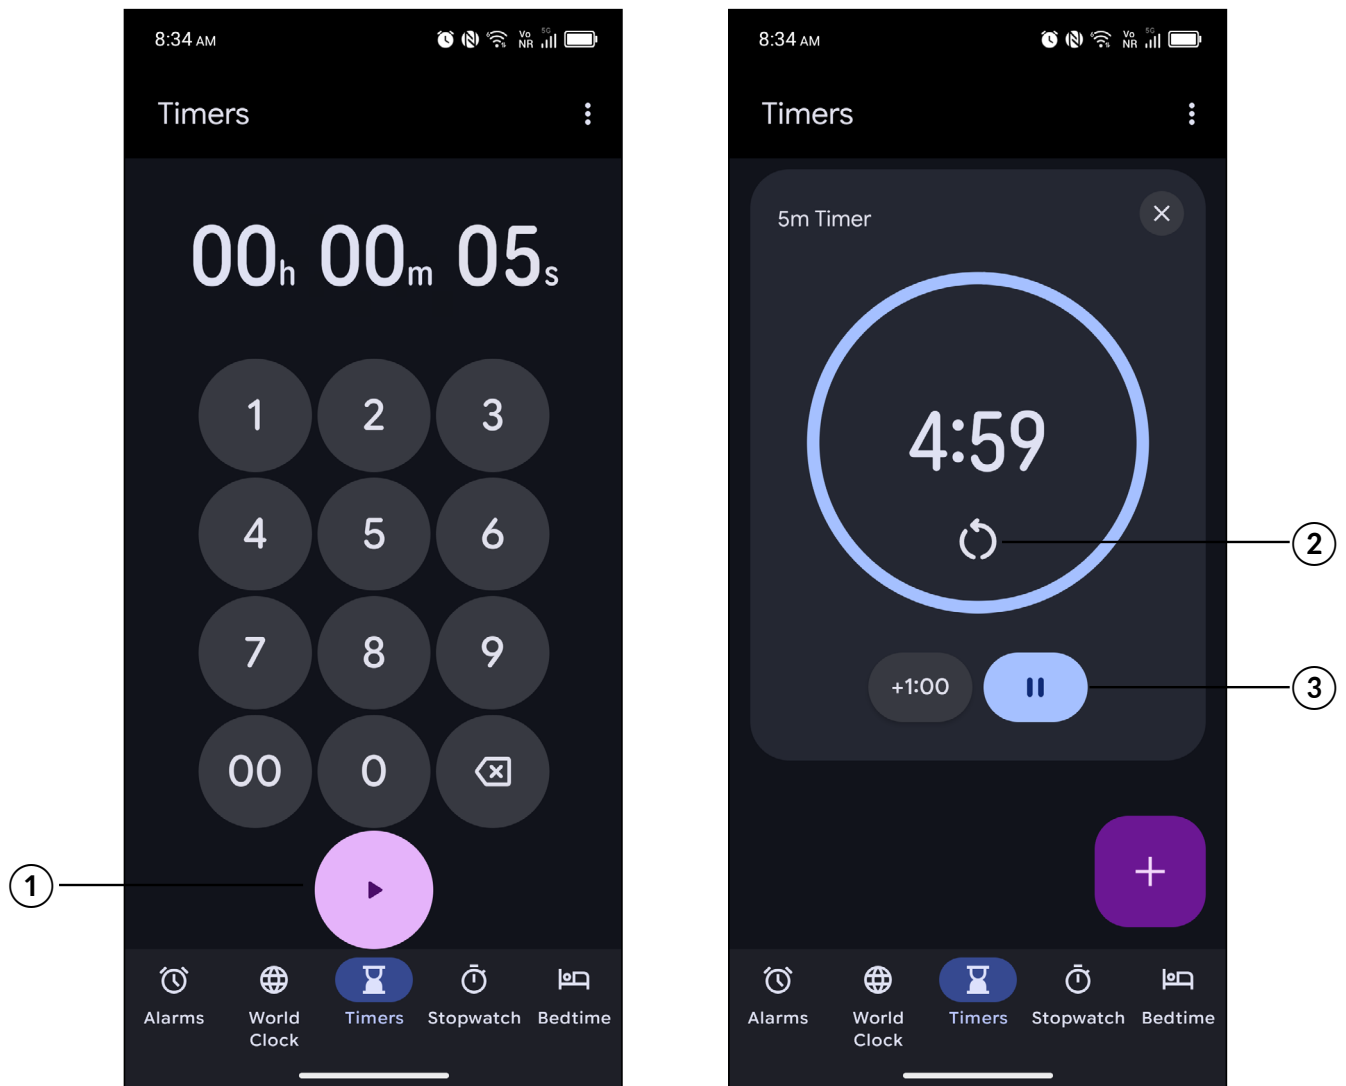


① Tap to start the countdown.

② Tap to reset.

③ Tap to pause.

Stopwatch


From the Clock screen, tap Stopwatch to enter.

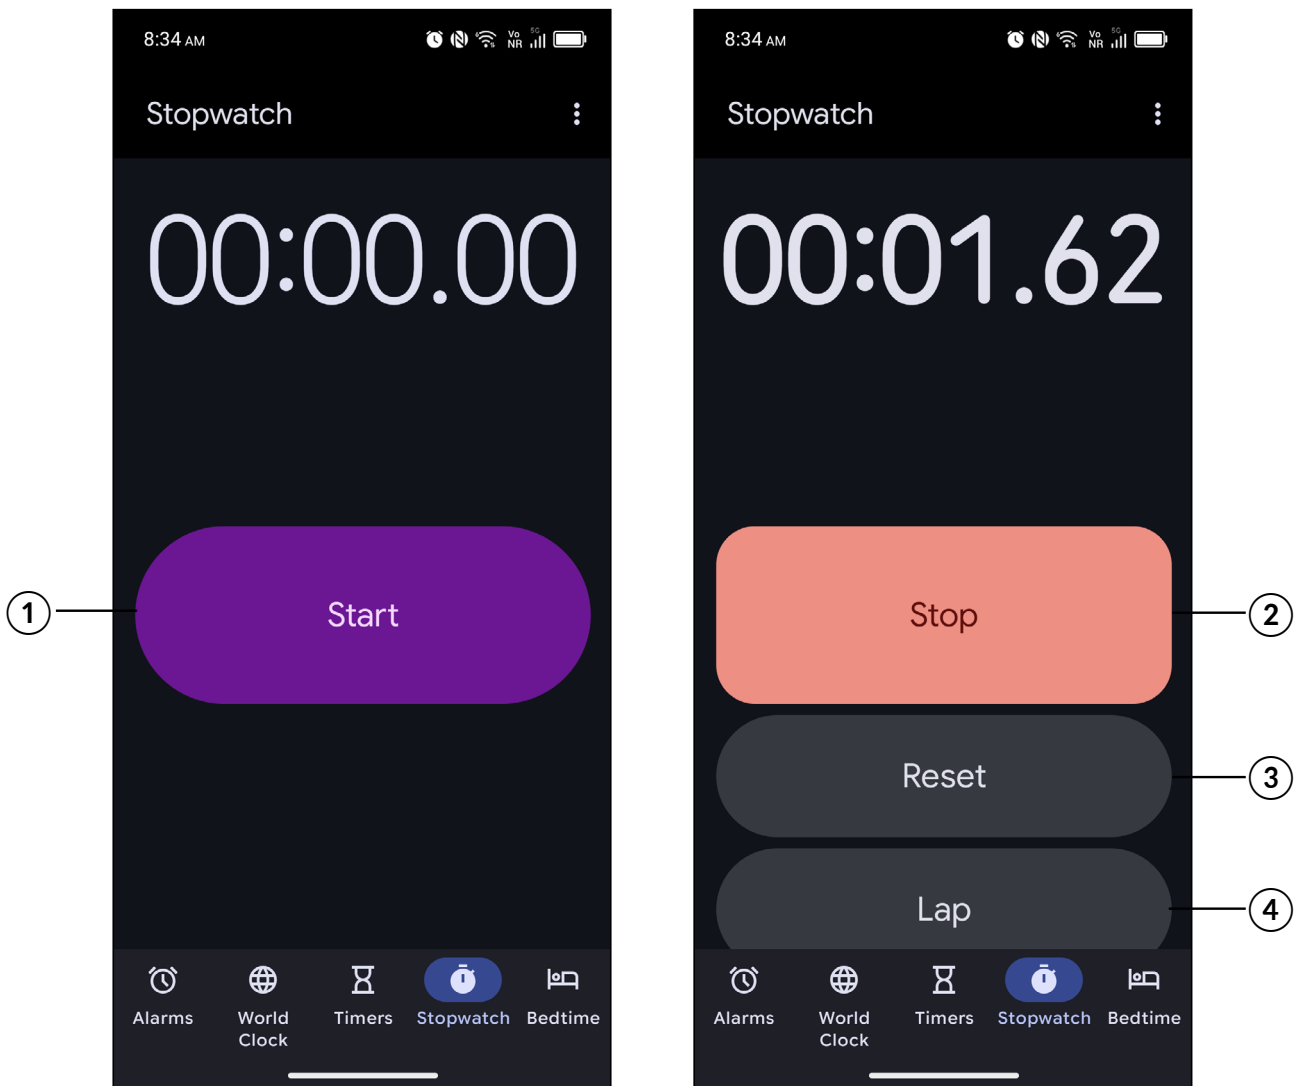

- ① Tap to start the Stopwatch.
- ② Tap to stop.
- ③ Tap to reset.
- ④ Tap to show a list of records according to the updated time.

Bedtime


From the **Clock** screen, tap **Bedtime** to set regular wake-up alarms, bedtime and reminder notifications and more.

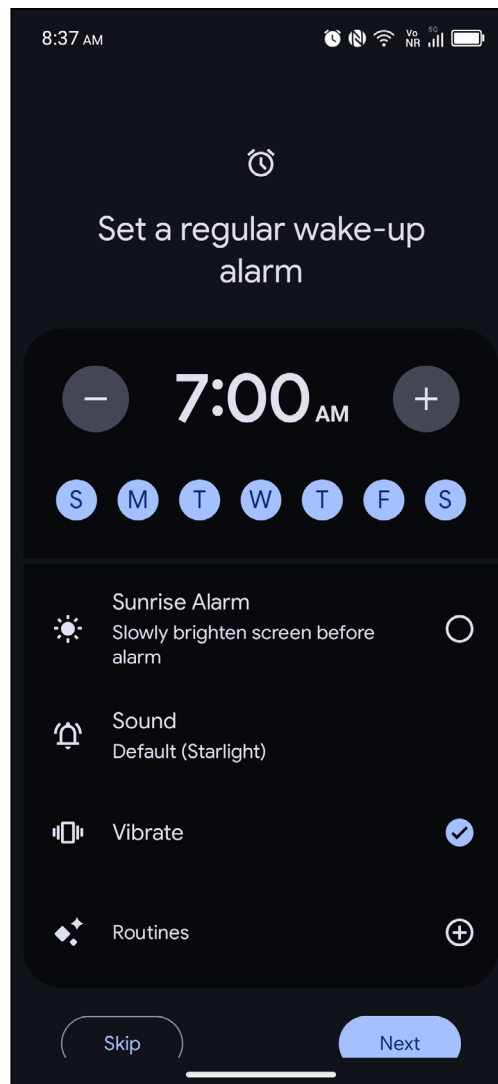

3.6 Calculator



To use the **Calculator**, swipe up from the Home screen, then tap

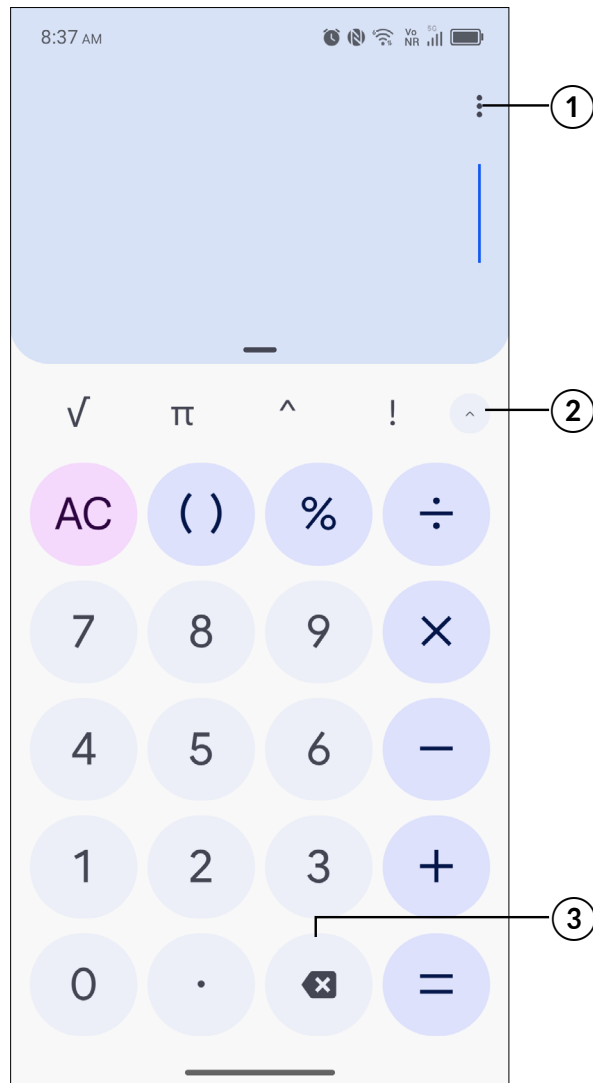

- ① Review calculation history, choose theme, review Google privacy policy, send feedback, search for help.
- ② Switch between Basic and Scientific calculation.
- ③ Delete digits.

3.7 Other applications ⁽¹⁾

The previous applications in this section are preinstalled on your phone. To download and install more 3rd party applications, use the Google Play Store application.

3.8 Google applications

Google apps are preinstalled in your phone. To optimize your user experience with Google apps, we recommend using them with a Google™ account.

This chapter provides a general introduction to the Google apps. For more details, refer to their official websites.

Google

Google keeps you updated with the latest news anywhere on your device. Your bookmarks, history, and settings can be synchronized with your Google Account across all devices that have the Google app installed.

Chrome

Chrome™ is a cross-platform web browser with a minimalistic user interface.

When used with a Google™ account, Chrome™ allows synchronization of bookmarks and search histories across devices.

⁽¹⁾ Application availability depends on country and carrier.

Gmail

Gmail™ is a user-friendly and secure email service. Send and receive emails, synchronize your emails across devices, and access other communication and productivity features like Google Workspace, including Google Meet™, Google Duo™, and Google Drive™.

Maps

Maps™ features include satellite images, aerial images, street maps, 360-degree interactive views, real-time traffic conditions, business listings and route planning.

Drive

Google Drive™ is a cloud storage application with file synchronization across devices.

YouTube

YouTube™ is an online video-sharing and streaming application where you can upload, broadcast in real-time, watch and share videos.

Meet

Video call your friends and family with Meet™.

Photos

Photos™ helps you easily share, search and organize your pictures. All images captured with your phone are automatically saved and organized into predefined categories and can be easily shared across platforms.

Assistant

Press and hold the Power button to access Google Assistant, quickly ask for help, check the news, make a phone call, and more.

Files

Files is a file management application that helps you browse files, clean up storage space, and share.

Personal Safety

Connect with help and get useful information in case of emergency. Plus, get alerts about nearby natural disasters or public emergencies.

Play Store

Play™ Store is the official app store for Android™ devices. Browse and download millions of apps. Some apps may charge you for their content/features.

4 Settings

To access your **Settings**, swipe up from the Home screen and then tap . You can also drag down from the notification panel and tap .

4.1 My device

Get information about your phone, including the software version, OS version, CPU type, camera, storage, legal information, build number, and more.

4.2 Wi-Fi

Turning on Wi-Fi and connecting to a network

1. Go to **Settings > Wi-Fi** and tap .
2. Once Wi-Fi is turned on, available Wi-Fi networks will be listed.
3. Tap a Wi-Fi network to connect. If the network you selected is secured, enter a password or other credentials and tap **Connect**.

Note: To disconnect from a wireless network, tap (icon) next to the network name and then tap **Disconnect**.

Adding a Wi-Fi Network

1. Go to **Settings > Wi-Fi > Add network**.
2. Enter the name of the network and any required network information.
3. Tap **Connect**.

Forgetting a Wi-Fi Network

1. Turn on Wi-Fi (if needed).
2. On the Wi-Fi screen, tap the name of the saved network.
3. Tap **Forget** in the **Network details** section of the selected network.

4.3 Bluetooth

Turning on Bluetooth

Go to **Settings > Bluetooth** and tap .

Your device name and available devices will appear.

Renaming your Device

1. Tap **Device name**.
2. Enter a name, and tap **Rename** to confirm.

Pairing/Connecting your Phone with a Bluetooth Device

1. When Bluetooth is on, available devices will appear under **Your Devices**.
2. Tap a Bluetooth device you want to pair your phone with.
3. Tap **Pair** to confirm.

Unpairing from a Bluetooth device

- Tap  beside the device you want to unpair from.
- Tap **Disconnect** to unpair, or tap **Forget** to unpair and prevent future automatic-pairing.

4.4 Network & Internet

Manage your mobile connectivity effortlessly. Get detailed SIM card information and set up eSIM profiles.

4.5 Connections

Airplane Mode

Use Airplane mode to disable all wireless connections such as Wi-Fi and Bluetooth.

You can also activate Airplane mode by tapping **Airplane mode** on the Quick setting bar.

NFC

Tap  to enable NFC.

NFC lets you share files, pictures, music, and more by touching another device.

Cast

Share your device's screen on a TV, and display content from supported apps.

USB

Charge your device and transfer files or photos between your phone and a computer with a USB cable.

Connecting your phone to a computer:

1. Use the provided USB cable to connect the phone to your computer.

2. Open the **Notification** panel and choose how you want to transfer files, or tap **Settings > Connections > USB** to select a transfer mode.

Printing

Tap **Printing** to activate and chose your Default printer.

Hotspot & Tethering

Go to **Settings > Connections > Hotspot & tethering** to share your phone's data connection via Wi-Fi, Bluetooth or USB.

Renaming or secure your mobile hotspot:

1. Tap **Settings > Connections > Hotspot & tethering > Mobile hotspot**.
2. Tap **Hotspot name** to rename the network or set your network security.



The functions above may incur additional charges from your operator. Extra fees may also be charged if you're roaming.

Data Usage

Check your data usage on cellular and Wi-Fi networks.



Data usage tracked on your phone may differ from the data usage tracked by your carrier.

VPN

Virtual Private Networks (VPNs) allow you to securely connect to a network. VPNs are commonly used by companies, schools, and other institutions.

Adding a VPN

1. Tap **Settings > Connections > VPN**.
2. Follow your network administrator's instructions.
3. Tap **SAVE**.



Before adding a VPN, we recommend you lock your phone.

Private DNS

Select the **Private DNS** mode of the device.

Chromebook

Link your phone to a Chromebook to text from your computer, share your phone's Internet connection and simplify unlocking.

Cross-Device Services

Connect your phone and collaborate with other devices. Follow the on-screen steps to configure.

Quick Share

Share files with Android devices located nearby. Enable Device location to detect nearby compatible devices. Quick Share can be used offline.

Android Auto

Use apps on your car screen.

4.6 Wallpaper & Style

Choose your favourite wallpaper, themes, and customize colours. You can also adjust display size and text settings.

4.7 Home screen & Lock screen

Home settings

Set your preferred Home screen style and grid size. Customize how App icon badges display notifications, manage automatic filling of empty spaces when apps are removed from your home screen (Fill empty cells) and **Google feed**.

Default home app

Choose your preferred Launcher app (if more than one is installed on your device).

Lock screen settings

Customize your notifications on the lock screen.

Charging animation

Shows a charging percentage animation temporarily when the USB-C charger is connected to the device.

4.8 Display

Brightness Level

Adjust screen brightness.

Adaptative Brightness

Optimize screen brightness based on lighting conditions.

Darker Display Mode

Lowers your screen brightness automatically in a low-light environment.

Mode

Select your preferred screen mode (Light or Dark).

Dark Mode Settings

Shows your phone's Dark mode settings. Dark mode uses darker colours to reduce eye fatigue, especially in low light.

Eye Comfort Mode

Reduce blue light and adjust the colour temperature to reduce eye fatigue. You can also create a schedule to turn this mode on automatically.

Reading Mode

Optimize your screen display to make your reading experience as comfortable as a book.

NXTVISION

Image enhancement

Enhance image contrast, sharpness and dark details automatically.

Video enhancement

Enhance the colour, contrast and details of videos for a cinema-worthy visual experience.

Game enhancement

Improve the shadow details and enhance overall gaming graphics.

Colour Mode & Temperature

Adapt your screen's colour gamut based on content.

Sleep

Set a screen timeout.

Refresh Rate

Select the refresh rate of the screen. A high refresh rate provides a smoother scrolling experience. With a standard refresh rate, your battery lasts longer.

High Brightness Mode

Increase the readability of your screen when in sunlight.

Colour Contrast

Adjust the colour contrast between text, icons, and their backgrounds on your phone to enhance screen readability in different lighting conditions.

Display Size and Text

Adjust font size, display size and text.

Auto-Rotate Screen

Enable or disable the Auto-rotate functionality (also accessible through Quick Settings panel).

Status Bar & Dotch

Set the style of the status bar and notification icons, and how your battery percentage is displayed.

Turn on Dotch for a better full screen apps experience.

Your app's content will stretch to the very top edge of your physical screen, wrapping around the camera hole.

When Device is in VR

When using your phone with a VR system, you can choose **Reduce blur** (the recommended setting for sharper visuals) or **Reduce flicker**. Selecting the right option helps enhance your virtual reality experience and reduce potential visual distractions.

Screen saver

Choose a screen saver for your phone.

4.9 NXTPAPER Zone

NXTPAPER Key Settings

Mode selector: Select a NXTPAPER mode.

Enter immediately: Choose the NXTPAPER mode you'd like to activate with the NXTPAPER key.

NXTPAPER Mode

NXTPAPER mode offers superior image quality with reduced glare and reflections. Slide the NXTPAPER key up/down to turn NXTPAPER mode on/off.

Max Ink Mode

This black-and-white display silences all distractions and stretches your battery life for days of uninterrupted reading.

Ink Paper Mode

Transforms your screen into a classic, black-and-white e-reader to eliminate visual fatigue.

Colour Paper Mode

Softens the screen into gentle, pastel tones - perfect for comfortably reading magazines or colourful articles.

NXTPAPER Mode Switch Sound

Manage the NXTPAPER mode switch sound.

NXTPAPER Key

Switch from Classic mode to your selected NXTPAPER mode instantly.

Eye Care

Get alerts if the device detects unhealthy use habits (e.g., if the device detects when your eyes are too close to the screen), set rest periods, and more.

4.10 Sounds & Vibration

Sound Mode and Volume

Enable/disable **Ring, Vibrate, or Sound off**, and adjust the volume of Ringtones, Notifications, Media, and Alarms.

Phone Ringtone

Set your incoming call ringtone.

Notification Ringtone

Set your notifications ringtone.

Alarm Ringtone

Set your alarm ringtone.

DTS Sound

Activate DTS sound for an improved sound experience.

Live Caption

Get real-time captions for audio content, including calls, videos and podcasts.

Modes

Access Modes to enable **Do Not Disturb**, set **Bedtime** or create your own mode.

Vibration & Haptics

Set vibration for calls, notifications, and more.

More sound Settings

Set dial pad tones, screen locking sound, touch sounds, and more.

4.11 Notifications

App icon badges

Manage the presentation of icon badges when getting notifications from your apps.

Privacy

Easily turn notifications on and off.

Bubbles

If enabled, compatible apps will appear as floating icons on top of other apps.

Manage app notifications

Configure all your apps' notifications.

Notification history

Check recent or snoozed notifications.

4.12 Battery

Check your current battery level, see your apps power usage, enable power-saving modes to extend battery life and set up battery optimization for specific apps to prevent excessive battery usage.

4.13 Smart Manager

Smart Manager automatically scans your device and provides recommendations to optimize your battery usage, manage storage and protect your phone against security threats.

Restricting auto-launch for apps can make the system run faster and extend battery life. To ensure apps that require push notifications continue to work as expected, turn off **Automatically manage** to configure each application individually.

4.14 Storage

Monitor and manage your storage.

4.15 Apps

Get details about the applications on your phone, and manage their data usage.

In the **Permissions** menu of an application, you can set permissions for the app, such as allowing the app to access your Camera, Contacts, Location, and more.

4.16 Advanced Features

NXTURBO & RAM expansion

NXTURBO optimizes speed and efficiency for smoother multitasking. **RAM expansion** allows you to allocate storage as virtual RAM, enhancing overall system performance for demanding apps and games.

Sidebar

Access your favourite apps, tools, and shortcuts instantly with the customizable Sidebar.

Quick Gestures

Enable or disable actions like 3-finger screenshot or Tap to wake on your lock screen.

Power Button

Quickly open camera

Set **Quickly open camera** to access your camera by pressing the Power button twice from any screen.

Power button ends call

Set this feature to end a call by pressing the Power button.

Long press Power button

Choose from multiple options you can activate when long pressing the Power button: Access your Google Assistant, access the Power menu and more.

Screen Recorder

Adjust screen record settings like video resolution, sound, and whether to record screen interactions. Swipe down from the status bar to access the **Quick Settings** panel and then go to



Screen recorder.

4.17 Security & Privacy

Security and privacy updates will show as an alert in this menu.

App Security

Play Protect regularly checks your apps and device for suspicious behavior. You'll be notified of any security risks are found.

Device Unlock

Screen lock

Select how to unlock your screen: Swipe, Pattern, PIN or Password.

Face unlock

Unlock your device with facial recognition.

Fingerprint

Use your fingerprint to unlock your screen.

NOTE: You will need to set a pattern, PIN, or password before using face or fingerprint unlock.

Account Security

Check your Google account security details.

Device Finders

Locate your device remotely, or wipe your device data to keep it secure.

System & Updates

Check for security updates, updates to Google Play system and Back up.

Privacy

Privacy controls

Manage the information your apps have access to, including your location, call logs, contacts, microphone and camera, whether to show or hide passwords, and choose the information you want Google to keep track of.

Privacy dashboard

Show which apps recently used permissions like location, camera, call logs, and more.

Other Settings

Advanced Protection

Advanced Protection helps defend against online attacks, harmful apps, unsafe connections, spam calls and other threats.

More security and privacy

Other security and privacy settings are available under this menu.

Android System intelligence

Get suggestions based on the people, apps, and content you interact with.

Notifications on lock screen

Manage the notifications on your locked screen.

Show media on lock screen

Access your media player on your locked screen.

Allow camera software extensions

Enable or disable advanced camera features.

App content

If enabled, apps will send content to Android.

Autofill service from Google

Autofills saved passwords, credit cards, and addresses stored in your Google account.

Usage & diagnostics

Allows your phone data to be shared with Android to help optimize the experience.

Android safe browsing

Flags security threats while browsing.

Extend unlock

Keep your phone unlocked when it's on you, at specific trusted places, or near a trusted device.

Device admin apps

Manage your device security and data access for the **Find My Device** feature.

Encryption & credentials

Enable device encryption and see encryption credentials.

Trust agents

Lets you unlock your phone without entering a passcode when using Extended unlock.

App pinning

Keeps an app permanently visible until you unpin it.

4.18 Location

Manage apps location permissions.

4.19 Safety & Emergency

Manage the information that is accessible from your locked screen and can be viewed without unlocking your phone in an emergency situation. This information is also shared with first responders when making an emergency call.

Open Personal Safety

Link your Google account with Personal Safety to access additional features, like **Emergency Sharing**, **Safety Check**, and more.

Note: Medical and emergency information is stored directly on your phone, not on Google's servers.

Medical Information

Manage medical information to use in case of an emergency.

Emergency Contacts

Manage your emergency contacts.

Emergency SOS

Press the Power button quickly 5 times or more in an emergency to perform selected actions.

Earthquake Alerts

Get alerts when an earthquake is detected nearby, including the initial estimated magnitude and distance from your location.

Unknown tracker Alerts

Get notified if an unknown tracker is detected. Location access is required.

Silence Notifications while Driving

Silences notifications while you are driving to help you stay focused on the road.

Wireless Emergency Alerts

Manage emergency alerts.

4.20 Accounts

Add, remove, and manage your email and other supported accounts. You can also use these settings to control the options for how all applications send, receive and synchronize data.

Tap Add account to add an account for the selected app.

4.21 Digital Wellbeing & Parental Controls

App Timers

Set time limits for apps.

Bedtime Mode

Silence your notifications, dim your screen and change your display to black and white.

Focus

Pause distracting apps and hide their notifications.

Manage Notifications

Enable or disable app notifications.

Heads Up

Get a reminder to focus on your surroundings if your device detects you're walking while using your phone.

Parental Controls

Add content restrictions and set limits on screen time.

4.22 Google

Configure your Google account and service settings.

4.23 Accessibility ⁽¹⁾

Accessibility Menu

The Accessibility Menu offers quick access to frequently used accessibility features.

⁽¹⁾ Application availability may vary depending on the country and operator.

Select to Speak

Tap on specific items on your screen to hear them read or described aloud.

Switch Access

Control your device with an external device, such as a keyboard.

TalkBack

Get spoken feedback so that you can use your device without looking at the screen.

Display Size and Text

Set font and display size.

Colour and Motion

Manage how colours are displayed on your screen and control visual animations. You can choose from various colour filters to enhance colour perception, reduce eye strain, or accommodate colour blindness.

You can also disable animations for a smoother visual experience.

Extra dim

Lower the screen brightness beyond the normal minimum level, providing a softer display for use in low-light or for users who are sensitive to bright screens.

Magnification

Zoom in on specific areas of your screen. You can activate magnification using gestures or the Accessibility Menu.

Timing Controls

Adjust the reaction speed of system features, such as button presses or keyboard responses.

System Controls

Set alternative ways to control different actions, such as using the Power button to end a call or Auto-rotate your screen.

Vibration & Haptics

Set preferences for vibration in media, ringtones, notifications, or alarms.

Live Caption

Detects speech on your device and automatically generates captions. Set language, captions, sound labels, volume control, and more.

Caption Preference

Customize caption size and style.

Audio Description

Hear a description of what's happening on the screen in supported movies, shows and other media.

Flash Notifications

Use the camera flash or screen flash for notifications or alarms.

Hearing Devices

Pair new hearing aid devices, cochlear implants, or amplification devices with your phone.

Audio Adjustment

Enable mono sound and adjust audio balance.

Accessibility Shortcuts

Learn quick ways to enable or disable specific accessibility features.

Text-to-Speech Settings

Convert written text into spoken words. Manage the speech rate, pitch, and language.

4.24 System

System Update

Tap Check for updates to update your system (refer to section 5 of this guide for more details).

Update Apps

Check for available updates for your apps.

Language & Region

Customize your phone's language and regional settings and set specific languages for individual apps.

Navigation Mode

Select your favourite navigation mode. Default setting on your phone is **Gesture navigation**.

Keyboard

Configure your on-screen keyboard settings.

Date & Time

Customize your preferences for how date and time are displayed.

Backup

Backup your phone's settings and other app data to Google servers through your Google account.

Multiple Users

Add new users to your phone. Each user can customize their Home screens, accounts, apps, settings, and more.

Reset Options

Reset all network settings and app preferences.

If **Erase all data** is selected, the data in your phone's internal storage will be erased. We recommend you backup your data before resetting your phone.

Regulatory & Safety

View product information such as Product model, Manufacturer name, IMEI, CU reference, Bluetooth Declaration ID, and more.

5 FOTA upgrade

Use the FOTA (Firmware Over The Air) upgrade to update your phone's software.

To access updates, from the app list, tap **Settings > System > System update**. Turn on data connection or Wi-Fi before searching for updates.

If **Settings > System > System update > ⋮ > Update settings > Automatically update** is turned off, you can update the software manually by tapping Check for updates.

We recommend keeping your default storage location as is during the system updates, to avoid issues.

6 Troubleshooting

Before contacting the service center, here are some instructions to help you troubleshoot your device:

- For optimal operation, fully charge the battery.
- To improve the phone's performance, delete unnecessary files or apps.
- Update your phone's software at **Settings > System > System update**.
- Reset your phone at **Settings > System > Reset options > Erase all data** (factory reset). Another way to reset your phone is to hold down the Power button and the Volume up button simultaneously when your phone is off. Release the Power button when the device vibrates, then select **Wipe data / factory reset > Factory data reset**. Your phone data will be lost permanently. We recommend you fully back up your phone data before resetting.

My phone can't be switched on or is frozen

- When the phone can't be switched on, charge for at least 20 minutes to ensure it has the minimum battery power needed. Then switch it on again.
- If the phone falls into a loop while powering on and the user interface can't be accessed, press and hold the Power button to reset. This eliminates any abnormal OS booting issues caused by third party applications.
- If neither method is effective, reset the phone by pressing the Power button and the Volume down button at the same time. Release the Power button when the device vibrates, then select **Wipe data/ factory reset > Factory data reset**.

My phone has not responded for several minutes

- Turn it off by pressing and holding the Power button and then restart it.
- If it still doesn't work, reset the phone.

My phone turns off by itself

- Check that your screen is locked when you are not using your phone, and make sure that the Power button is not accidentally pressed while the screen is unlocked.
- Check the battery level.
- If it still doesn't work, try resetting the phone or updating your software.

My phone can't charge properly

- Make sure that you are using the charger provided with the phone.
- Make sure that your battery is not completely empty; if the battery power has been empty for a long time, it may take around 20 minutes to display the battery charging indicator on the screen.
- Make sure to charge your phone under normal temperature conditions - 0°C (32°F) to 40°C (104°F).
- When abroad, check that the voltage input is compatible.

My phone can't connect to a network or "No service" is displayed

- Try connecting to the network by moving to another physical location.
- Check the network coverage with your carrier.
- Check that your SIM card is valid with your carrier.
- Try connecting at a later time in case the network is overloaded.

My phone can't connect to the Internet

- Make sure the Internet access service of your SIM card is available.
- Check your phone's Internet connection settings.
- Make sure that there is network coverage.
- Try connecting at a later time or at another location.

Invalid SIM card

- Make sure that the SIM card has been correctly inserted.
- Make sure that the chip on your SIM card is not damaged.
- Make sure that the service of your SIM card is available.

My phone can't make outgoing calls

- Make sure that you dialed a valid number and tapped .
- For international calls, check the country and area codes.
- Make sure that your phone is connected to a network, and that the network is not overloaded.
- Check your subscription status with your carrier (credit, valid SIM card, etc.).
- Make sure that you have not turned off outgoing calls.
- Make sure that your phone is not in Airplane mode.

My phone can't receive incoming calls

- Make sure that your phone is on and connected to a network (check for overloaded network).
- Check your subscription status with your carrier (credit, valid SIM card, etc.).
- Make sure that you have not forwarded incoming calls.
- Make sure that you have not turned off certain calls.

- Make sure that your phone is not in Airplane mode.

The caller's name/number doesn't appear when a call is received

- Check that you have subscribed to your carrier's Call Display service.
- Your caller may have concealed his name or number.

I can't find my contacts

- Make sure that your SIM card is not damaged.
- Make sure that your SIM card is inserted properly.

The sound quality of the calls is poor

- Adjust the volume during a call with the Volume buttons.
- Check the network signal strength. Move to a location with stronger signal strength if needed.
- Make sure that the receiver, connector and speaker on your phone are clean.

I can't use the features described in the manual

- Check with your carrier to make sure that your subscription includes the feature you'd like to use.
- Make sure that this feature doesn't require an extra accessory.

When I select a number from my contacts, the number can't be dialed

- Make sure that you have correctly recorded the number in your contacts.
- Make sure that you have selected the correct country code for international numbers.

I can't add a contact

- Make sure that your SIM card isn't full; delete some contacts or save the contacts on your phone if you need more space.

My callers can't leave messages on my voicemail

- Contact your network carrier to check service availability.

I can't access my voicemail

- Make sure that your carrier's voicemail number is correctly entered in "Voicemail number".
- Try later in case the network is overloaded.

I can't send or receive MMS

- Check your phone storage as it might be full.
- Contact your network carrier to check service availability and MMS parameters.
- Verify the server center number or your MMS profile with your carrier.
- The server center may be swamped. Try again later.

My SIM card PIN is locked

- Contact your network carrier to obtain the PUK (Personal Unblocking Key) code.

I can't connect my phone to my computer

- Check to make sure the USB port is not broken. Try another USB port on your computer.
- Make sure USB drivers are properly installed.
- If you are using a Windows computer, make sure it supports MTP mode. If you are using a Mac, make sure to install Android File Transfer from www.android.com/filetransfer/.

I can't download new files

- Make sure that there is sufficient space on your phone.
- Select the microSD™ card as the location to store downloaded files.

- Check your subscription with your carrier.

The phone can't be detected by others with Bluetooth

- Make sure to charge your phone completely (minimum 150 minutes).
- Make sure that the two phones are within Bluetooth's detection range.

The battery drains too fast

- Make sure to charge your phone completely (minimum 150 minutes).
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to get an exact indication.
- Adjust the brightness of your screen.
- Extend your email auto-check interval.
- Update news and weather information manually, or increase their auto-check interval.
- Close background-running applications if they are not being used.
- Turn off Bluetooth, Wi-Fi, or GPS when not in use.

The phone becomes warm following prolonged calls, game playing, Internet browsing or running other complex applications

- This heating is a normal consequence of the CPU handling excessive data. Ending the above actions will make your phone return to normal temperature.

After a factory data reset is performed, I can't use my phone without entering Google account credentials

- If you don't remember your Google account credentials, use Google's account recovery procedures.
- If you still cannot access your phone, visit an authorized repair center. Please note that this is not covered by your warranty.

I forgot some passwords/codes/keys on my phone

- Perform a factory data reset.
- If you still cannot access your phone, visit an authorized repair center. Please note that this is not covered by your warranty.

How to back up my device data

- Go to **Settings > System > Backup** (refer to section 4.24 of this guide for details)

7 Specifications

Platform:

- MediaTek Dimensity 7300

OS:

- Android 16

Memory:

- 128GB ROM + 8GB RAM

Dimensions (LxWxD):

- 169.4 x 80.05 x 7.98 mm

Weight:

- 208g

Display size:

- 6.9"

Network compatibility:

- 2G: Band2/3/5/8
- 3G: Band1/2/4/5/8
- 4G: Band 1/2/3/4/5/7/8/9/12/13/14/17/18/19/20/25/26/28/29/30/34/38/39/40/41/42/48/66/71
- 5G: n1/2/3/5/7/12/14/20/25/26/28/29/30/38/40/41/48/66/70/71/77/78

Connectivity:

- Bluetooth 5.4
- Wi-Fi 802.11a/ b/g/n/ac/ax, 2.4GHz&5Ghz, 6GHz

- Type-C audio jack
- Type-C USB

Camera:

- Rear Camera: 50MP 0.64um OIS+8MP (UW AF)+Flicker
- Front Camera: 32MP

Audio & Video supported formats:

- AAC, HE-AAC v1, HE-AAC v2, AMR, AWB, MIDI, MP3, OGG, VORBIS, WAV(Alaw/Ulaw), WAV(Raw), FLAC, OPUS
- H.263, MPEG4, H.264, H.265, VP8, VP9, AV1

Battery⁽¹⁾:

- Typical Capacity: 5200 mAh
- Rated Capacity: 5000mAh

Expansion Slot:

- microSD™ memory card
(compatible with microSD™ cards of up to 2T)

Sensors:

- G-sensor
- Light Sensor
- Proximity Sensor
- E-Compass
- Barometer
- Gyroscope
- HALL switch

Note: Specifications are subject to change without prior notice.

⁽¹⁾ The original battery has undergone rigorous safety inspections to meet qualification standards, the use of non-original batteries may be dangerous.

8 Accessories

Included accessories

- TypeC 2.0 Cable
- SIM Card PIN
- Safety and Precautions leaflet



- Only use ahlo accessories included with your device or designed to meet your device specifications.